



# **RADIATOR VALVES**

**“Giacotech” TG, F series**



**GIACOMINI**  
WATER E-MOTION

Technical documentation

0157EN

1

## USE AND MAIN FEATURES

2

## QUALITY

3

## MICROMETRIC VALVES WITH THERMOSTATIC OPTION

4

➤ Thermostatic option

4

➤ Micrometric adjustment

5

➤ Product codes and technical features

10

➤ Dimensions with thermostatic heads

11

## VALVES WITH THERMOSTATIC OPTION

12

➤ Thermostatic option

12

➤ Worksite protection handwheel

13

➤ Product codes and technical features

19

➤ Dimensions with thermostatic heads

21

## VALVES WITH THERMOSTATIC OPTION AND KEYMARK (EN215) CERTIFICATION

22

➤ Certification

22

➤ Thermostatic option

23

➤ Product codes and technical features

29

➤ Dimensions with thermostatic heads

30

➤ Additional information for KEYMARK (EN215) certified valves

31

## MANUAL VALVES

32

➤ Manual handwheel

32

➤ Product codes and technical features

37

## LOCKSHIELDS

38

➤ System adjustment

38

➤ Product codes and technical features

45

## ACCESSORIES AND SPARE PARTS

46

➤ Thermostatic heads

47

➤ Chronothermostat for radiators

48

➤ Tail pieces and nuts

49

➤ Bonnets and special wrenches

49

➤ Handwheels and caps

## USE AND MAIN FEATURES

The “Giacotech”TG, F series valves and lockshields offers great practicality and reliability during installation. This family represents the evolution of the “Giacomini Programma 80” that, with its functional innovative characteristics (the thermostatic element and the pipe union with self-sealing element in plastic material) imposed itself on the market from 1979 on.

Today the “Giacotech”TG, F series is presented in an updated and extended form both for completeness of the range and in the technical aspects.

The current series offers a more complete range of products, from micrometric valves with thermostatic option to simple valves with thermostatic option, from manual valves to lockshields, all provided in both the iron and the adapter versions.

In this way the installer is able to choose with the confidence to identify and use the most suitable for his needs.

Among the peculiar characteristics of the “Giacotech”TG, F series, in particular:

- the introduction of a self-sealing element made of elastomeric material instead of plastic material;
- the unification of the adapter bases for the most used sizes;
- the restyling of the handwheels of the thermostatic micrometric valves;
- the introduction of worksite protections to preserve the thermostatic connection from accidental damage during installation.




## QUALITY

The first company's Quality Management System ISO 9002 was certified in 1986 and was extended to ISO 9001 (the actual UNI EN ISO 9001:2008) in 1996. Subsequently, the Environmental Management System UNI EN ISO 14001:2004 of the company's manufacturing sites and goods export procedure were quality certified. Finally, the Occupational Health and Safety System is being certified to BS OHSAS 18001:2007. The next internal goal is to achieve the most recent energy and ethics certification.



*Laboratory tests*

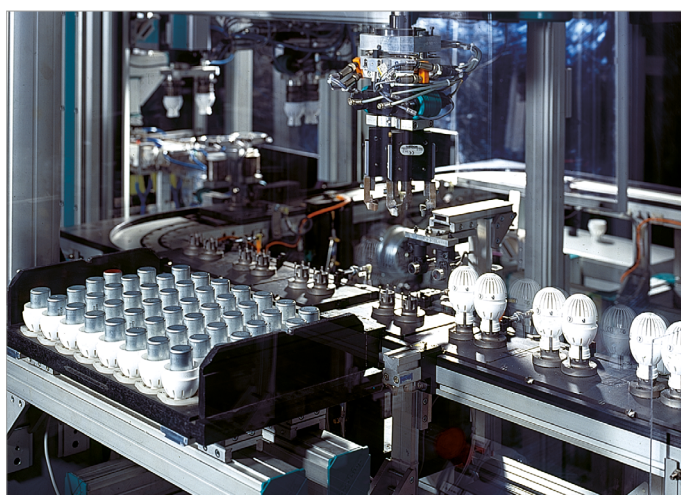

*Manufacturing assembly*

Information concerning certifications, compliance and homologations included in this catalogue are for reference only, subject to regular updating and may refer only to specific product dimensions.

Giacomini S.p.A. may not be held liable, implicitly or explicitly, for obsolete, incomplete or irrelevant information.

In case of missing or unclear information, please contact Giacomini technical support.

Giacomini S.p.A. reserves the right to change the products and related technical information at any time without notice.





## MICROMETRIC VALVES WITH THERMOSTATIC OPTION

Thermostatic option

Micrometric adjustment

Product codes and technical features

Dimensions with thermostatic heads

## THERMOSTATIC OPTION


The "Giacotech" TG, F series micrometric valves with thermostatic option, are easily equipped with thermostatic heads or thermo-electric actuators, in order to allow the automatic control of the room temperature, guaranteeing comfort and energy saving.

Therefore is possible to use the thermostatic heads with liquid sensor and Clip-Clap quick connection (R460, R468, R470), with remote sensor (R462), with remote sensor and knob (R463) or chronothermostat for radiators (K470H, K470W).

The thermostatic heads and chronothermostat for radiators are installed directly on the valve body after removing the micrometric manual handwheel. To remove the micrometric manual handwheel proceed as follow:


- 1) remove the upper cap using a screwdriver;
- 2) remove the internal adjustment pin;
- 3) remove the handwheel by turning it counterclockwise;
- 4) remove the cam using a screwdriver.

### Warning.

With thermostatic head installed on the valve body, to avoid excessive loads on the seal gasket of the thermostatic bonnet (with the resulting risk of jamming and locking) during the summer months, is recommended to place the knob in the fully open position, as marked by the symbol .

In case of malfunction of the bonnet it is possible to replace the stem O-Ring, by unscrewing the nut using an hexagonal wrench 11 mm.

If the problem persists is also possible to replace the complete bonnet using the appropriate key R400.


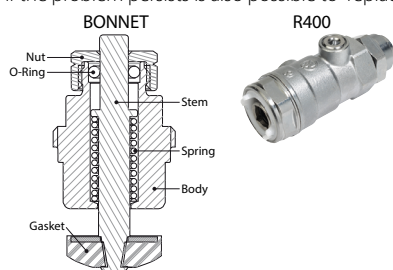


## MICROMETRIC ADJUSTMENT

The "Giacotech" TG, F series micrometric valves with thermostatic option are characterized by the possibility of carrying out the micrometric adjustment through which it is possible to partialize the opening of the valve operating in manual mode (i.e. without thermostatic head mounted on them).

Removing the upper cap gives access to the adjustment scale:

The adjustment can be made by moving the metal pin to the position suitable for your needs, according to the specific diagrams of each individual valve.

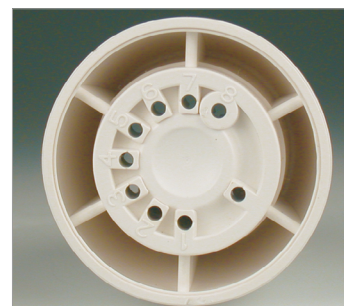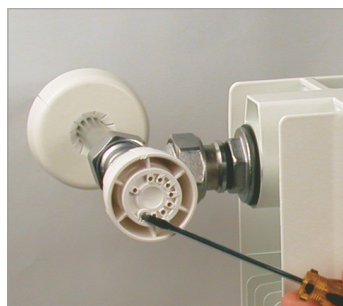

## PRODUCT CODES AND TECHNICAL FEATURES

### > R421TG



Angle micrometric valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads: 0,7 bar (3/4"); 0,4 bar (1")

#### Materials

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: stainless steel

Manual handwheel: ABS

Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Type of tail piece
R421X034	G 3/4"M x G 3/4"F	Chrome plated brass	Micrometric handwheel	Tail piece without self-sealing
R421X035	G 1"M x G 1"F	Chrome plated brass	Micrometric handwheel	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R421X034	3/4" x 3/4"	79	60	25	32	81	42	38
R421X035	1" x 1"	97	72	31	39	94	42	46

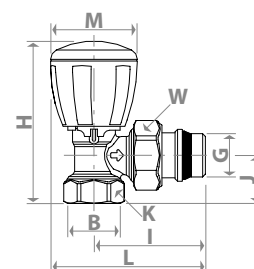

### Hydraulic features

#### R421X034

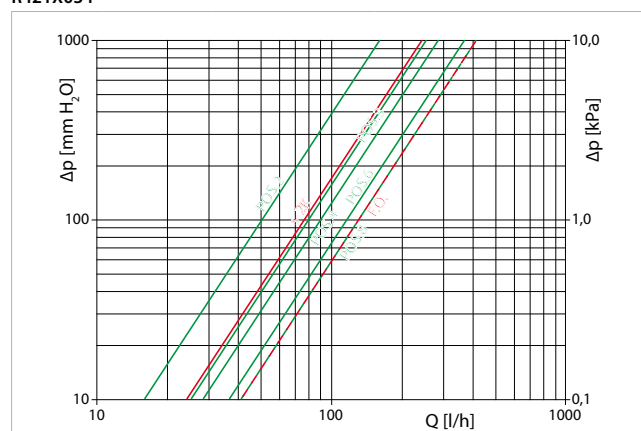


Micrometric adjustment pin position

Position	2	3	4	6	8
Kv	0,50	0,80	0,90	1,25	1,41

With R460, R468, R470, R462, R463 thermostatic heads

Curve	s-2K	F.O.
Kv	0,76	1,41

#### R421X035

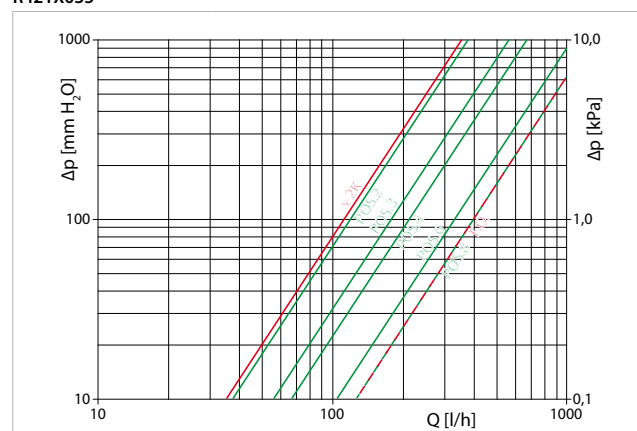

Micrometric adjustment pin position

Position	2	3	4	6	8
Kv	1,37	1,85	2,38	3,36	3,98

With R460, R468, R470, R462, R463 thermostatic heads

Curve	s-2K	F.O.
Kv	1,22	3,98

> **R422TG**

Straight micrometric valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads: 0,7 bar (3/4"); 0,4 bar (1")

**Materials**

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: stainless steel

Manual handwheel: ABS


Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece
R422X034	G 3/4" M x G 3/4" F	Chrome plated brass	Micrometric handwheel	Tail piece without self-sealing
R422X035	G 1" M x G 1" F	Chrome plated brass	Micrometric handwheel	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R422X034	3/4" x 3/4"	83	55	21	32	81	42	38
R422X035	1" x 1"	95	64	26	39	105	42	46

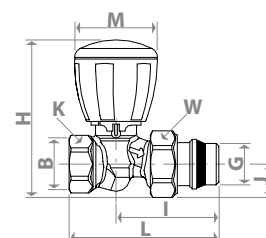

## Hydraulic features

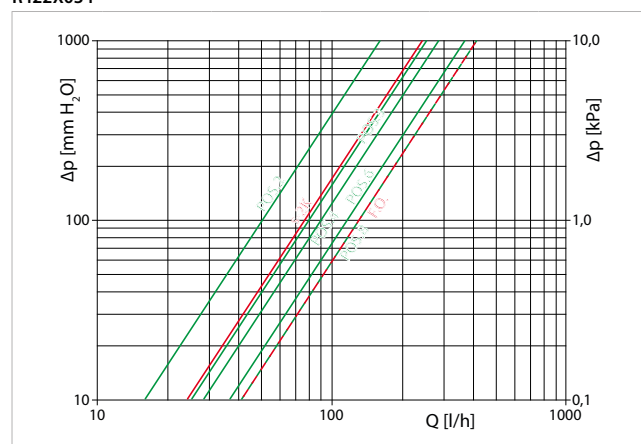
**R422X034**

Micrometric adjustment pin position

Position	2	3	4	6	8
Kv	0,50	0,80	0,90	1,25	1,41

With R460, R468, R470, R462, R463 thermostatic heads

Curve	s-2K	F.O.
Kv	0,76	1,41

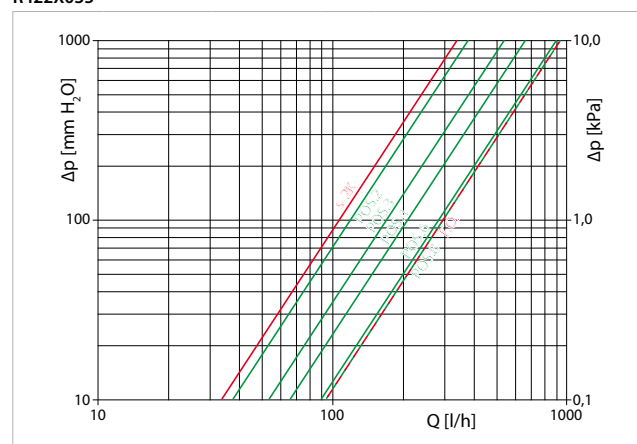**R422X035**

Micrometric adjustment pin position

Position	2	3	4	6	8
Kv	1,37	1,73	2,10	2,82	2,95

With R460, R468, R470, R462, R463 thermostatic heads

Curve	s-2K	F.O.
Kv	1,15	2,95



> R431TG




Angle micrometric valve with thermostatic option, with connection for copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Manual handwheel: ABS  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R431X032	G 3/8"M x Base 16	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R431X033	G 1/2"M x Base 16	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R431X034	G 1/2"M x Base 18	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R431EX037	G 1/2"M x 3/4"Eurocone	Chrome plated brass	Micrometric handwheel	R178E, R179E	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R431X032	3/8"x 16	75	53	21	74	42	30
R431X033	1/2"x 16	75	53	21	74	42	30
R431X034	1/2"x 18	75	53	21	74	42	30
R431EX037	1/2" x 3/4"E	75	53	21	74	42	30

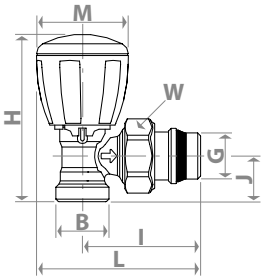


Hydraulic features

R431X032, R431X033, R431EX037

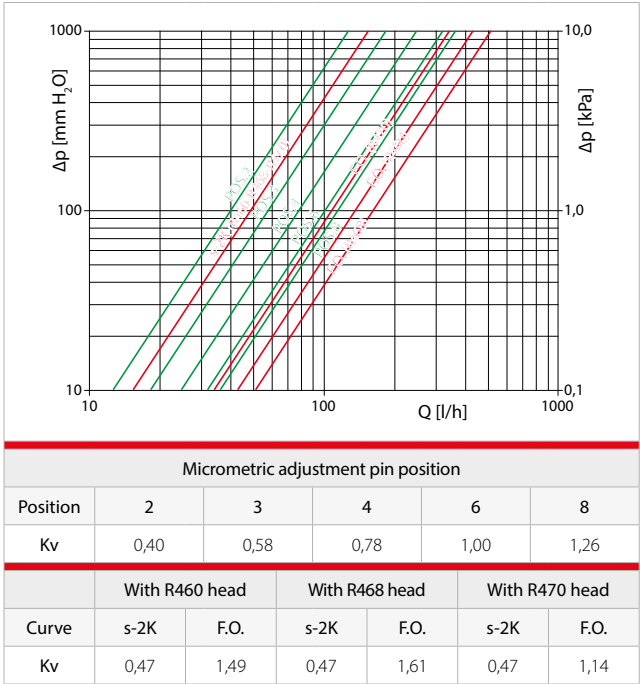

R431X034

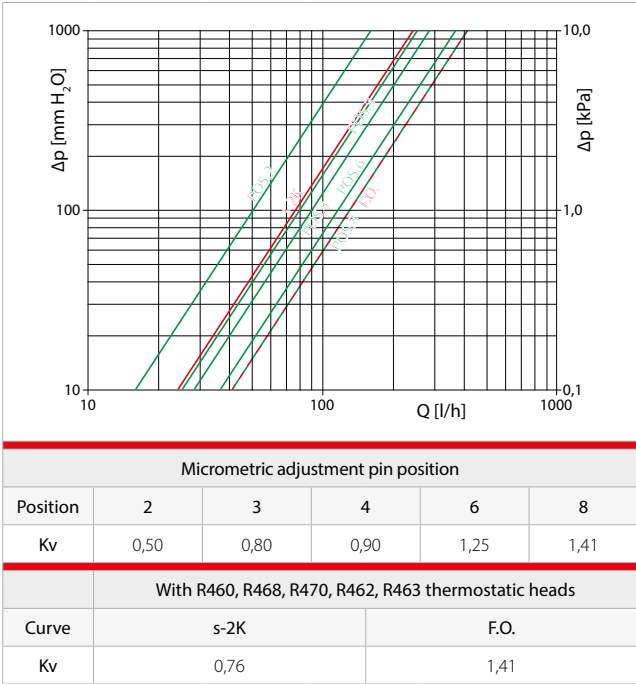

> **R432TG**

Straight micrometric valve with thermostatic option, with connection for copper, plastic or multilayer pipe adaptor.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2")

**Materials**

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: stainless steel

Manual handwheel: ABS

Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R432X032	G 3/8" M x Base 16	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R432X033	G 1/2" M x Base 16	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R432X034	G 1/2" M x Base 18	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R432EX037	G 1/2" M x 3/4" Eurocone	Chrome plated brass	Micrometric handwheel	R178E, R179E	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R432X032	3/8" x 16	79	51	17	74	42	30
R432X033	1/2" x 16	79	51	17	75	42	30
R432X034	1/2" x 18	79	51	17	76	42	30
R432EX037	1/2" x 3/4" E	79	51	17	76	42	30

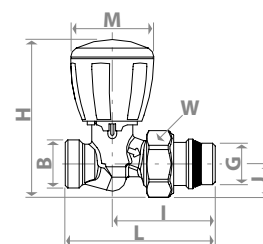

## Hydraulic features

R432X032, R432X033, R432EX037

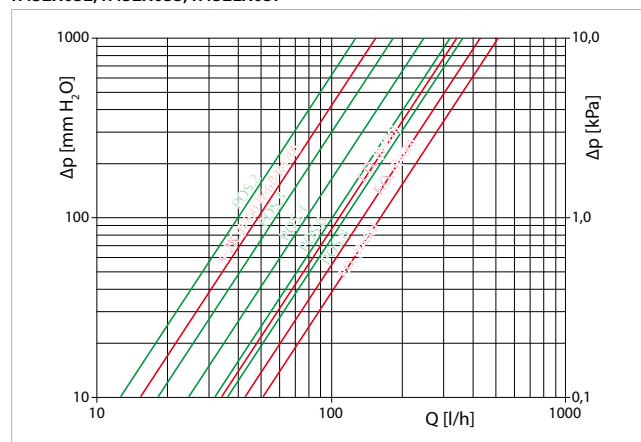


Micrometric adjustment pin position

Position	2	3	4	6	8
Kv	0,40	0,58	0,78	1,00	1,26

	With R460 head		With R468 head		With R470 head	
Curve	s-2K	F.O.	s-2K	F.O.	s-2K	F.O.
Kv	0,47	1,49	0,47	1,61	0,47	1,14

R432X034

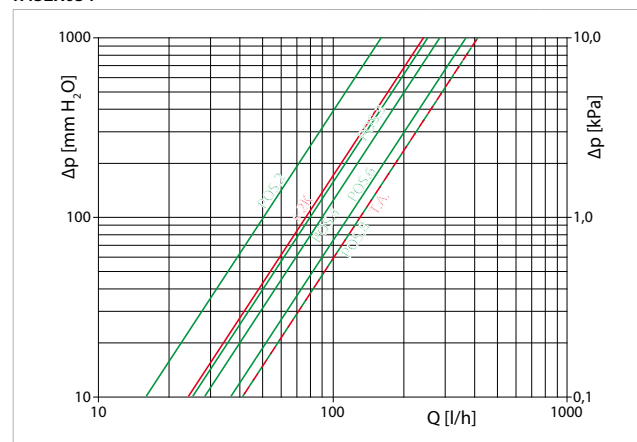

Micrometric adjustment pin position

Position	2	3	4	6	8
Kv	0,50	0,80	0,90	1,25	1,41

	With R460, R468, R470, R462, R463 thermostatic heads			
Curve	s-2K		F.O.	
Kv	0,76		1,41	

> R435TGA




Reverse angle micrometric valve with thermostatic option, with connection or for copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Manual handwheel: ABS  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R435X062	G 1/2" M x Base 16	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R435X043	G 1/2" M x Base 18	Chrome plated brass	Micrometric handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R435X062	1/2" x 16	53	45	36	113	42	30
R435X043	1/2" x 18	53	45	37	113	42	30

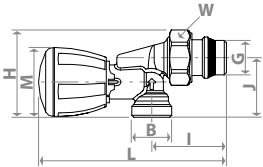


Hydraulic features

R435X062, R435X043

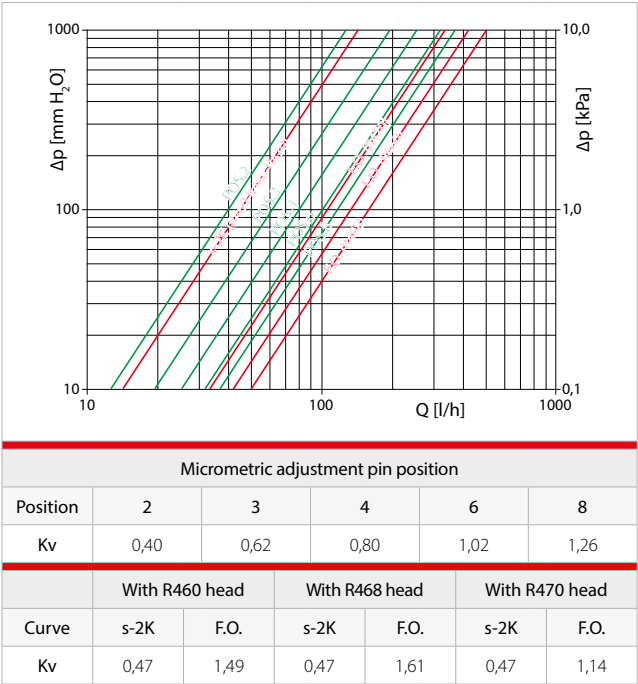

DIMENSIONS WITH THERMOSTATIC HEADS

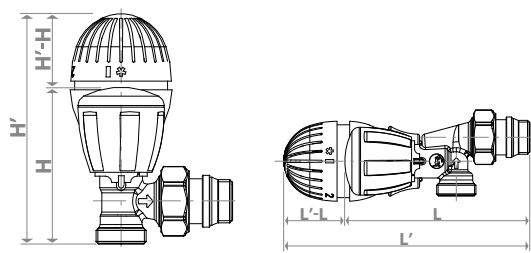

Type	Thermostatic heads		
	R460	R468	R470
H' - H [mm]	53	52	35
L' - L [mm] for R435TGA	53	52	35



**Warning.**  
On systems equipped with thermostatic heads, the use of the R147N pressure differential valves is recommended, in order to avoid overpressure phenomena derived from the possible closure by contemporaneusness factor of the heads.





## VALVES WITH THERMOSTATIC OPTION

Thermostatic option

Worksite protection handwheel

Product codes and technical features

Dimensions with thermostatic heads

## THERMOSTATIC OPTION


The "Giacotech" TG, F series micrometric valves with thermostatic option, are easily equipped with thermostatic heads or thermo-electric actuators, in order to allow the automatic control of the room temperature, guaranteeing comfort and energy saving.

Therefore is possible to use the thermostatic heads with liquid sensor and Clip-Clap quick connection (R460, R468, R470), with remote sensor (R462), with remote sensor and knob (R463) or chronothermostat for radiators (K470H, K470W).

The thermostatic heads and chronothermostat for radiators are installed directly on the valve body after removing the worksite protection handwheel. To remove the worksite protection handwheel proceed as follow:


- 1) unscrew the upper cap counterclockwise;
- 2) relase the handwheel by levering the base using a screwdriver.

### Warning.

With thermostatic head installed on the valve body, to avoid excessive loads on the seal gasket of the thermostatic bonnet (with the resulting risk of jamming and locking) during the summer months, is recommended to place the knob in the fully open position, as marked by the symbol .

In case of malfunction of the bonnet it is possible to replace the stem O-Ring, by unscrewing the nut using an hexagonal wrench 11 mm.

If the problem persists is also possible to replace the complete bonnet using the appropriate key R400.

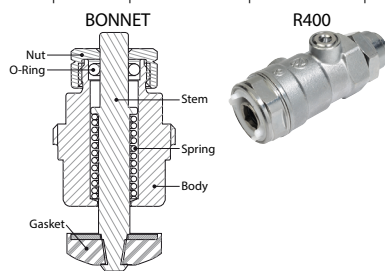

## WORKSITE PROTECTION HANDWHEEL

The worksite protection handwheel allows to preserve the valve from accidental blows during transport and installation.

Furthermore, the handwheel allows to manually partialize the valve flow rate; by rotating the upper cap counterclockwise, the valve will open, turning it clockwise the valve will close; at 36° cap rotations correspond to temperature variations of 1 °C.



## PRODUCT CODES AND TECHNICAL FEATURES

### > R401TG



Angle valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads: 0,7 bar (3/4"); 0,4 bar (1")

#### Materials

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: stainless steel

Worksite protection handwheel: PP-H

Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Type of tail piece
R401X034	G 3/4"M x G 3/4"F	Chrome plated brass	Worksite protection	Tail piece without self-sealing
R401X035	G 1"M x G 1"F	Chrome plated brass	Worksite protection	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R401X034	3/4" x 3/4"	60	60	25	32	78	23	38
R401X035	1" x 1"	78	72	31	39	94	23	46

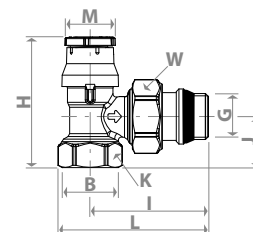


### Hydraulic features

#### R401X034

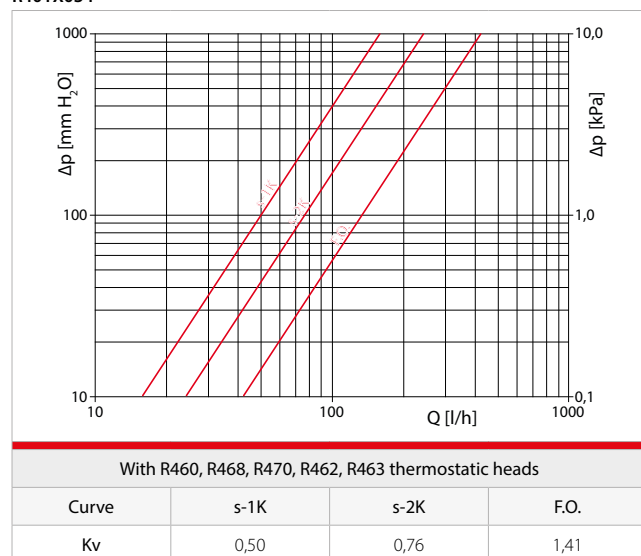

#### R401X035

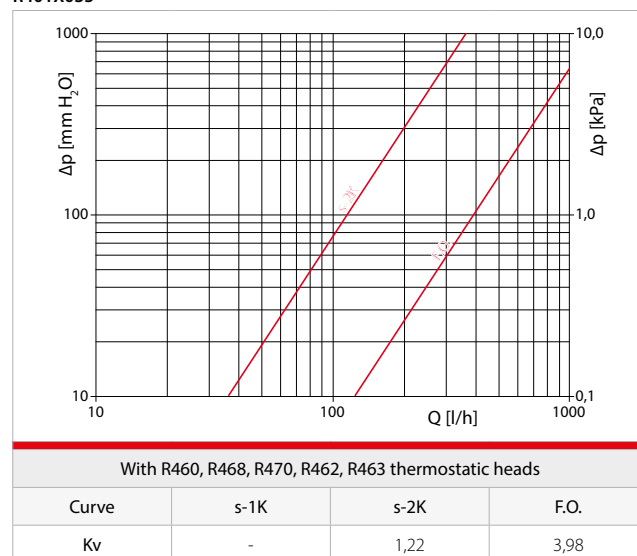

> **R402TG**

Straight valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2"); 0,7 bar (3/4"); 0,4 bar (1")

**Materials**

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: stainless steel

Worksite protection handwheel: PP-H


Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece
R402X034	G 3/4"M x G 3/4"F	Chrome plated brass	Worksite protection	Tail piece without self-sealing
R402X035	G 1"M x G 1"F	Chrome plated brass	Worksite protection	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R402X034	3/4" x 3/4"	64	55	21	32	81	23	38
R402X035	1" x 1"	76	64	26	39	105	23	46

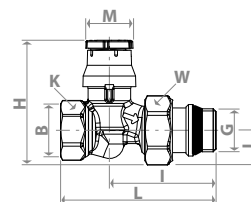


## Hydraulic features

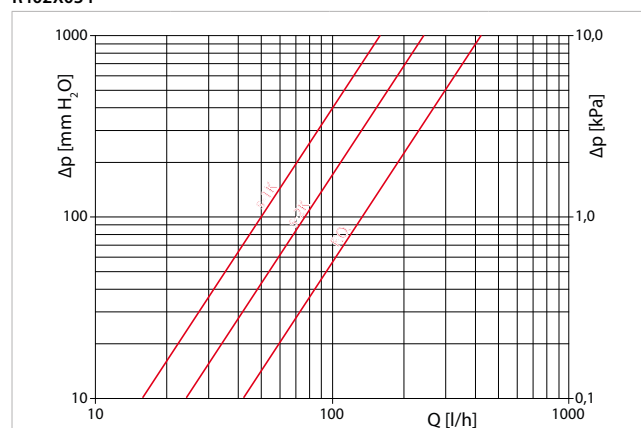**R402X034**

With R460, R468, R470, R462, R463 thermostatic heads

Curve	s-1K	s-2K	F.O.
Kv	0,50	0,76	1,41

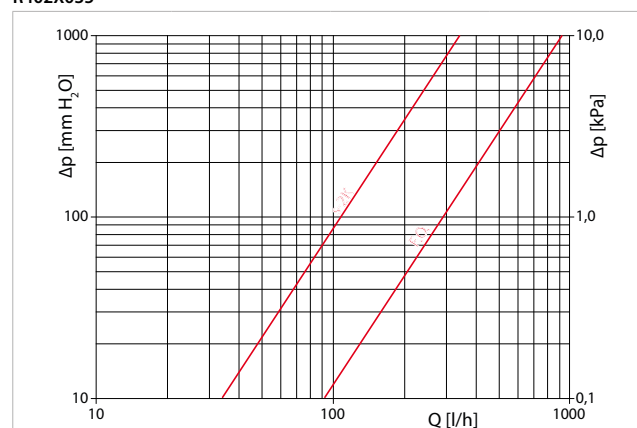
**R402X035**

With R460, R468, R470, R462, R463 thermostatic heads

Curve	s-1K	s-2K	F.O.
Kv	-	1,15	2,95



> R403TG

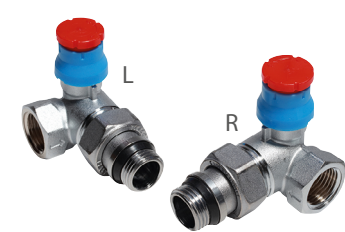


Double angle valve with thermostatic option, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Worksite protection handwheel: PP-H  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R403X052	G 3/8"M x G 3/8"F (LF)	Chrome plated brass	Worksite protection	-	Tail piece with self-sealing
R403X062	G 3/8"M x G 3/8"F (RG)	Chrome plated brass	Worksite protection	-	Tail piece with self-sealing
R403X054	G 1/2"M x G 1/2"F (LF)	Chrome plated brass	Worksite protection	-	Tail piece with self-sealing
R403X064	G 1/2"M x G 1/2"F (RG)	Chrome plated brass	Worksite protection	-	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	I' [mm]	J [mm]	L [mm]	L' [mm]	M [mm]	W [mm]	K [mm]
R403X052	3/8" x 3/8" (LF)	43	50	57	27	65	71	23	30	27
R403X062	3/8" x 3/8" (RG)	43	50	57	27	65	71	23	30	27
R403X054	1/2" x 1/2" (LF)	43	50	57	27	65	71	23	30	27
R403X064	1/2" x 1/2" (RG)	43	50	57	27	65	71	23	30	27

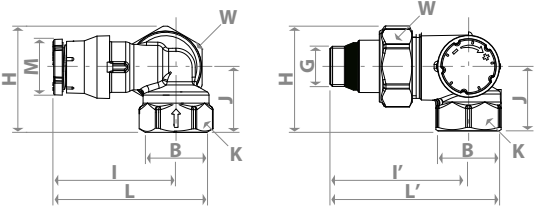


Hydraulic features

R403X052, R403X062, R403X054, R403X064

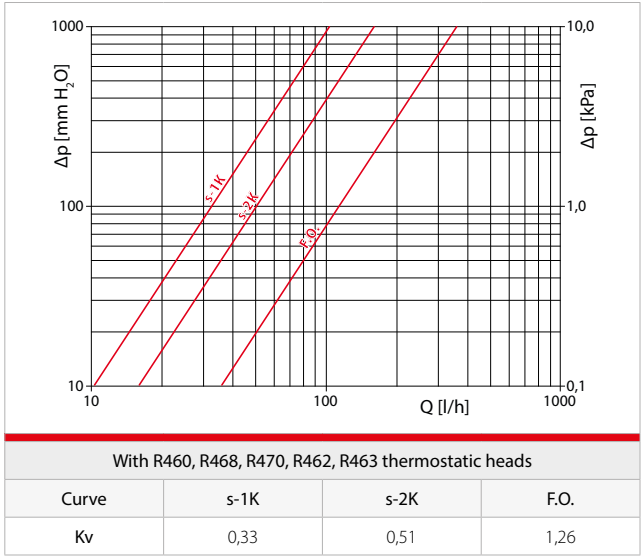

> R403TGA

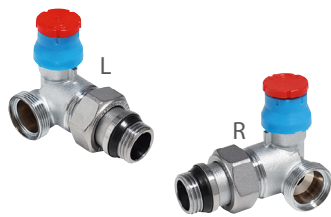


Double angle valve with thermostatic option, with copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Worksite protection handwheel: PP-H  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R403X024	G 1/2"M x Base 18 (LF)	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing
R403X034	G 1/2"M x Base 18 (RG)	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	I' [mm]	J [mm]	L [mm]	L' [mm]	M [mm]	W [mm]	K [mm]
R403X024	1/2" x 18 (LF)	41	50	58	24	63	71	23	30	-
R403X034	1/2" x 18 (RG)	41	50	58	24	63	71	23	30	-

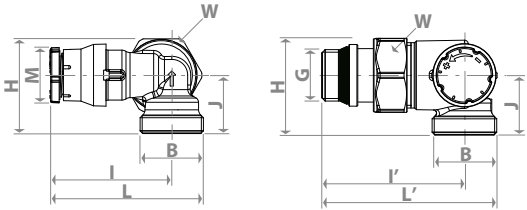

Hydraulic features

R403X024, R403X034

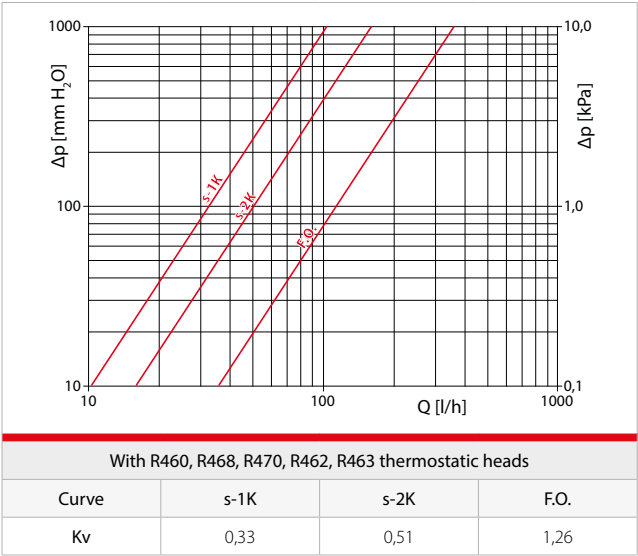

> R411TG




Angle valve with thermostatic option, with connection for copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Worksite protection: PP-H  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R411X032	G 3/8" M x Base 16	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing
R411X033	G 1/2" M x Base 16	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing
R411X034	G 1/2" M x Base 18	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R411X032	3/8" x 16	56	53	21	66	23	30
R411X033	1/2" x 16	56	53	21	66	23	30
R411X034	1/2" x 18	56	53	21	66	23	30

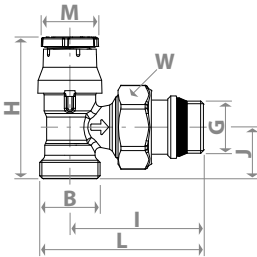


Hydraulic features

R411X032, R411X033

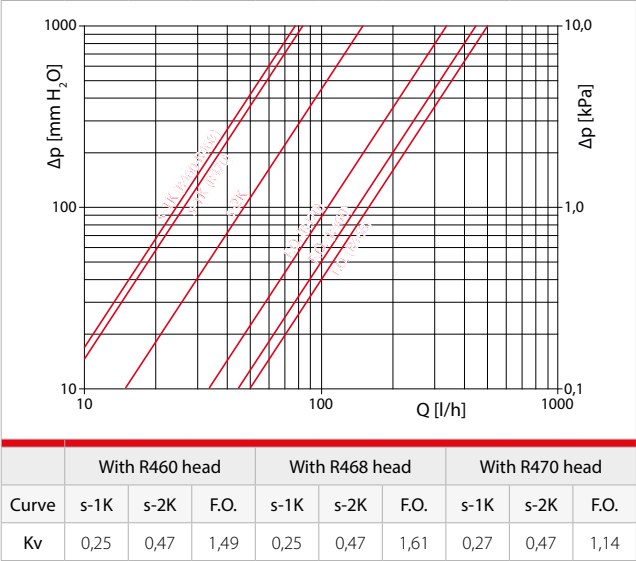

R411X034

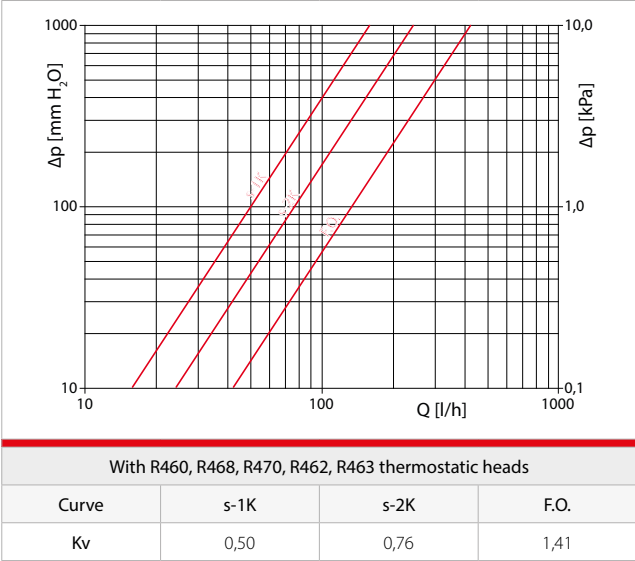

## > R412TG




Straight valve with thermostatic option, with connection for copper, plastic or multilayer pipe adaptor.  
 Fluid of use: water and glycol solutions (max. 30 %)  
 Temperature range: 5÷110 °C  
 Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
 Max. differential pressure with thermostatic heads: 1,4 bar (3/8" - 1/2")

### Materials

Body and main components: UNI EN 12165 CW617N brass  
 Monobloc command stem: stainless steel  
 Worksite protection: PP-H  
 Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R412X032	G 3/8" M x Base 16	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing
R412X033	G 1/2" M x Base 16	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing
R412X034	G 1/2" M x Base 18	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R412X032	3/8" x 16	60	51	17	74	23	30
R412X033	1/2" x 16	60	51	17	75	23	30
R412X034	1/2" x 18	60	51	17	76	23	30

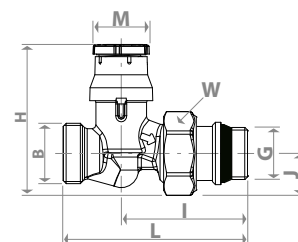


### Hydraulic features

#### R412X032, R412X033

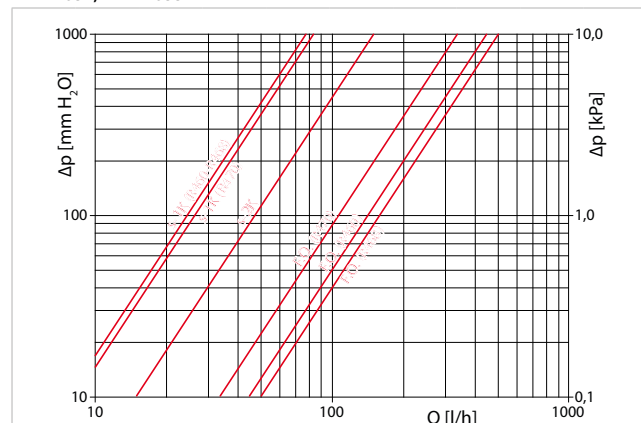

	With R460 head			With R468 head			With R470 head		
Curve	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.
Kv	0,25	0,47	1,49	0,25	0,47	1,61	0,27	0,47	1,14

#### R412X034

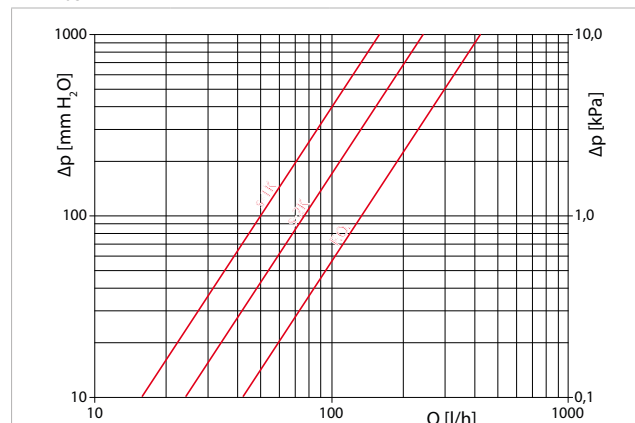

	With R460, R468, R470, R462, R463 thermostatic heads		
Curve	s-1K	s-2K	F.O.
Kv	0,50	0,76	1,41



> R415TGA




Reverse angle valve with thermostatic option, with connection or for copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Worksite protection handwheel: PP-H  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R415X042	G 1/2"M x Base 16	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing
R415X043	G 1/2"M x Base 18	Chrome plated brass	Worksite protection	R178, R178C, R179, R179AM	Tail piece with self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R415X042	1/2"x 16	53	45	36	94	23	30
R415X043	1/2"x 18	53	45	37	94	23	30

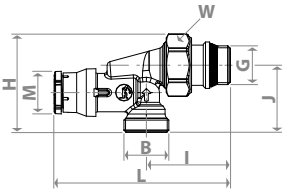


Hydraulic features

R415X042, R415X043

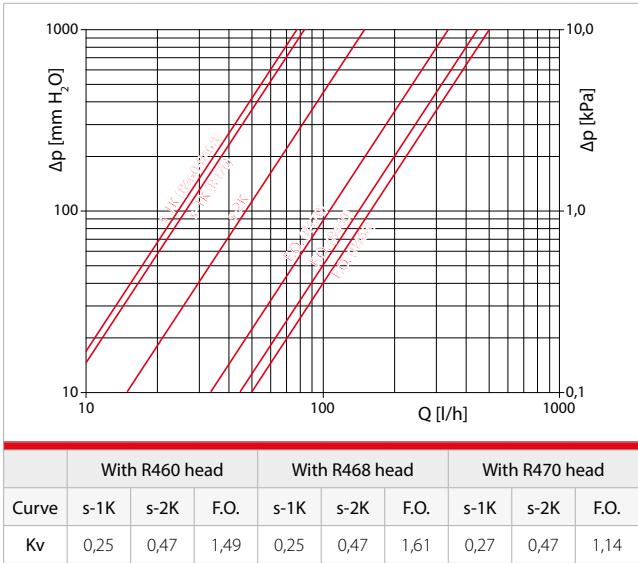

DIMENSIONS WITH THERMOSTATIC HEADS

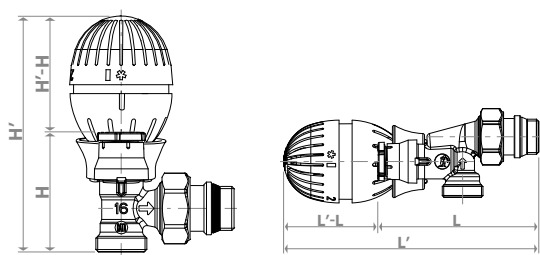

Type	Thermostatic heads		
	R460	R468	R470
H' - H [mm]	71	71	54
L' - L [mm] for R415TGA	71	71	54



**Warning.**  
On systems equipped with thermostatic heads, the use of the R147N pressure differential valves is recommended, in order to avoid overpressure phenomena derived from the possible closure by contemporaneusness factor of the heads.



## VALVES WITH THERMOSTATIC OPTION AND KEYMARK (EN215) CERTIFICATION

# 028

Certification


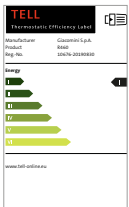
Thermostatic option

Product codes and technical features

Dimensions with thermostatic heads

Additional information for KEYMARK (EN215) certified valves

## CERTIFICATIONS

Certification	Description	Nation
	KEYMARK (EN215)	European Community
	TELL (Thermostatic Efficiency Label)	European Community

## THERMOSTATIC OPTION

The "Giacotech" TG, F series micrometric valves with thermostatic option, are easily equipped with thermostatic heads KEYMARK (EN215) certified, in order to allow the automatic control of the room temperature, guaranteeing comfort and energy saving.

Therefore is possible to use the thermostatic heads with liquid sensor and Clip-Clap quick connection (R460, R468, R470).

The thermostatic heads are installed directly on the valve body.

Depending on whether the valve is equipped with a worksite protection handwheel or manual handwheel, proceed as follows:

### • valves with worksite protection:

to remove the worksite protection handwheel proceed as follow:


- 1) unscrew the upper cap counterclockwise;
- 2) relase the handwheel by levering the base using a screwdriver.

### • valves with manual handwheel:

to remove the micrometric manual handwheel proceed as follow:


- 1) remove the upper cap using a screwdriver;
- 2) remove the internal adjustment pin;
- 3) remove the handwheel by turning it counterclockwise;
- 4) remove the cam using a screwdriver.

### Warning.

With thermostatic head installed on the valve body, to avoid excessive loads on the seal gasket of the thermostatic bonnet (with the resulting risk of jamming and locking) during the summer months, is recommended to place the knob in the fully open position, as marked by the symbol .

In case of malfunction of the bonnet it is possible to replace the stem O-Ring, by unscrewing the nut using an hexagonal wrench 11 mm.

If the problem persists is also possible to replace the complete bonnet using the appropriate key R400.

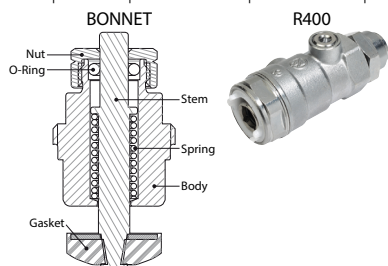

The bonnet replacement with R400 key is not possible for the following valves: R421FX004, R422FX004, R401FX004, R402FX004, R421FX004, R422FX004, R401FX004, R402FX004.

## PRODUCT CODES AND TECHNICAL FEATURES

### > R401TG



Angle valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads (except R462, R463, R462L): 1,4 bar (3/8" - 1/2"); 0,7 bar (3/4"); 0,4 bar (1")

#### Materials

Body and main components: UNI EN 12165 CW617N brass

Monobloc command stem: stainless steel


Worksite protection handwheel: PP-H

Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece	Notes
R401X132	G 3/8" M x G 3/8" F	Chrome plated brass	Worksite protection	Tail piece with self-sealing	KEYMARK (EN215) certified
R401X133	G 1/2" M x G 1/2" F	Chrome plated brass	Worksite protection	Tail piece with self-sealing	KEYMARK (EN215) certified
R401FX004	G 3/4" M x G 3/4" F	Chrome plated brass	Worksite protection	Tail piece without self-sealing	KEYMARK (EN215) certified




Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R401X132	3/8" x 3/8"	55	51	20	22	64	23	27
R401X133	1/2" x 1/2"	59	53	23	26	68	23	30
R401FX004	3/4" x 3/4"	68	62	26	32	69	23	38

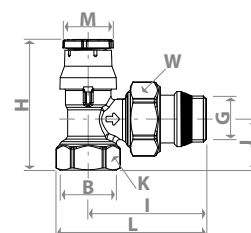


### Hydraulic features

#### R401X132, R401X133

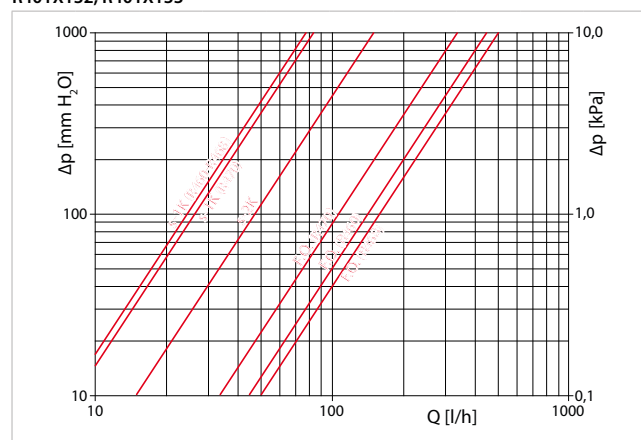

	With R460 head			With R468 head			With R470 head		
Curve	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.
Kv	0,25	0,47	1,49	0,25	0,47	1,61	0,27	0,47	1,14

#### R401FX004

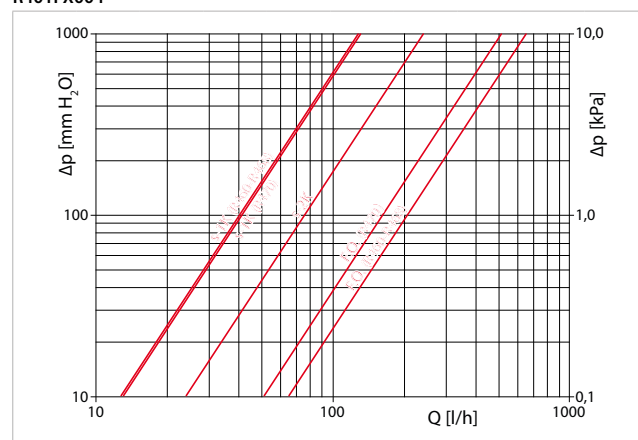

	With R460 head			With R468 head			With R470 head		
Curve	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.
Kv	0,40	0,76	2,15	0,40	0,76	2,15	0,41	0,76	1,68

## > R402TG



Straight valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads (except R462, R463, R462L): 1,4 bar (3/8" - 1/2"); 0,7 bar (3/4"); 0,4 bar (1")

### Materials

Body and main components: UNI EN 12165 CW617N brass

Monobloc command stem: stainless steel


Worksite protection handwheel: PP-H

Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece	Notes
R402X132	G 3/8" M x G 3/8" F	Chrome plated brass	Worksite protection	Tail piece with self-sealing	KEYMARK (EN215) certified
R402X133	G 1/2" M x G 1/2" F	Chrome plated brass	Worksite protection	Tail piece with self-sealing	KEYMARK (EN215) certified
R402FX004	G 3/4" M x G 3/4" F	Chrome plated brass	Worksite protection	Tail piece without self-sealing	KEYMARK (EN215) certified




Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R402X132	3/8" x 3/8"	58	54	15	22	76	23	27
R402X133	1/2" x 1/2"	60	55	17	26	82	23	30
R402FX004	3/4" x 3/4"	70	61	22	32	97	23	38

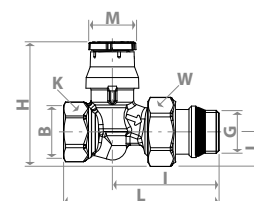


## Hydraulic features

### R402X132, R402X133

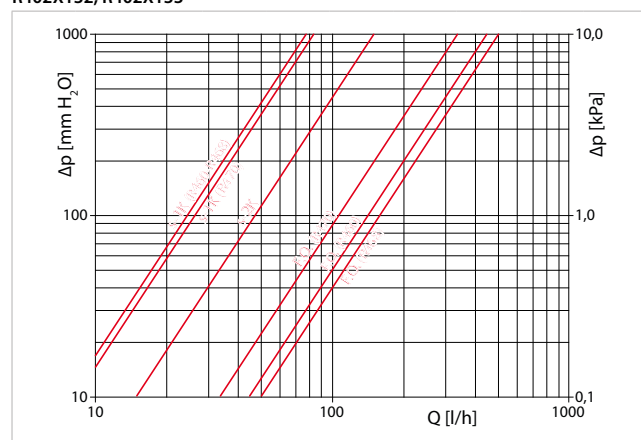

	With R460 head			With R468 head			With R470 head		
Curve	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.
Kv	0,25	0,47	1,49	0,25	0,47	1,61	0,27	0,47	1,14

### R402FX004

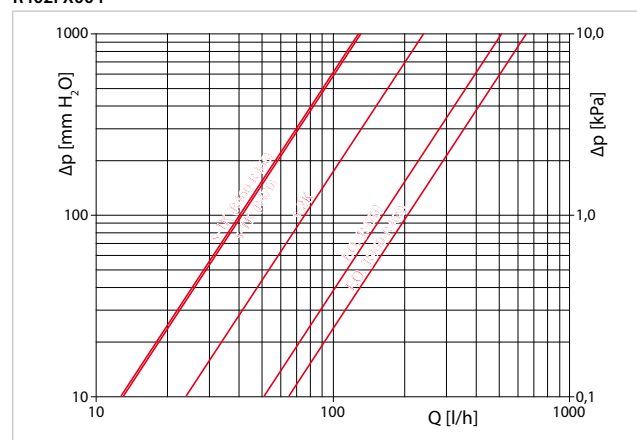

	With R460 head			With R468 head			With R470 head		
Curve	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.	s-1K	s-2K	F.O.
Kv	0,40	0,76	2,15	0,40	0,76	2,15	0,41	0,76	1,68

> R415TG




Reverse angle valve with thermostatic option, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Worksite protection handwheel: PP-H  
Gaskets: EPDM


Product code	Connections		Finishing		Type of knob		Type of tail piece		Notes
R415X033	G 1/2"M x G 1/2"F		Chrome plated brass		Worksite protection		Tail piece with self-sealing		KEYMARK (EN215) certified

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R415X033	1/2" x 1/2"	53	53	36	25	106	23	30

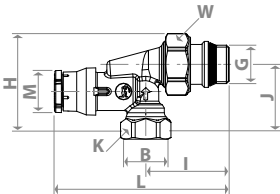

Hydraulic features

R415X033

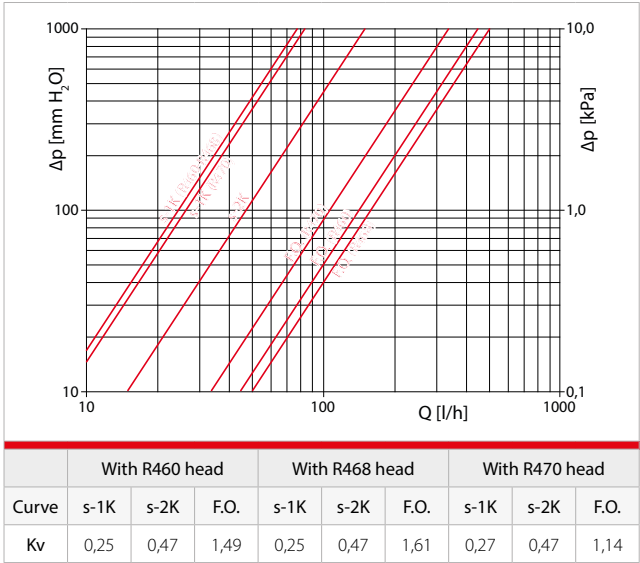



## > R421TG



Angle micrometric valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads (except R462, R463, R462L): 1,4 bar (3/8" - 1/2"); 0,7 bar (3/4"); 0,4 bar (1")

### Materials

Body and main components: UNI EN 12165 CW617N brass

Monobloc command stem: stainless steel


Manual handwheel: ABS

Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece	Notes
R421X132	G 3/8"M x G 3/8"F	Chrome plated brass	Micrometric handwheel	Tail piece with self-sealing	KEYMARK (EN215) certified
R421X133	G 1/2"M x G 1/2"F	Chrome plated brass	Micrometric handwheel	Tail piece with self-sealing	KEYMARK (EN215) certified
R421FX004	G 3/4"M x G 3/4"F	Chrome plated brass	Micrometric handwheel	Tail piece without self-sealing	KEYMARK (EN215) certified




Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R421X132	3/8" x 3/8"	74	51	20	22	72	42	27
R421X133	1/2" x 1/2"	78	53	23	26	74	42	30
R421FX004	3/4" x 3/4"	87	58	26	32	76	42	38

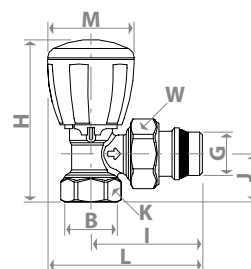


### Hydraulic features


#### R421X132

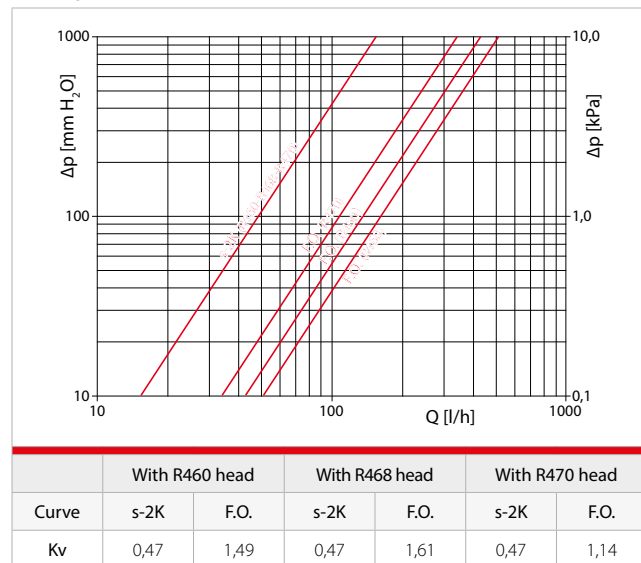

#### R421X133

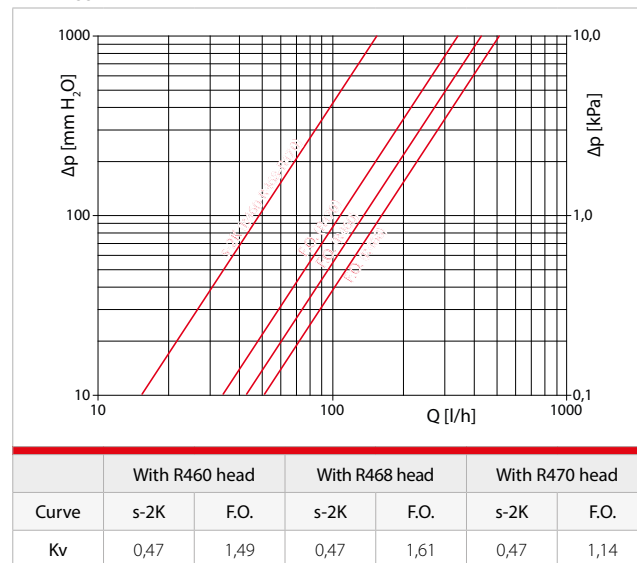

#### R421FX004

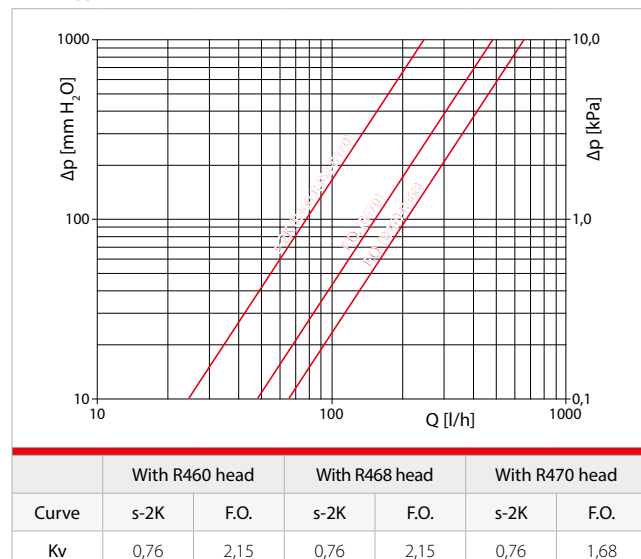

> **R422TG**

Straight micrometric valve with thermostatic option, with iron pipe connection.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads

Max. differential pressure with thermostatic heads (except R462, R463, R462L): 1,4 bar (3/8" - 1/2"); 0,7 bar (3/4"); 0,4 bar (1")

**Materials**

Body and main components: UNI EN 12165 CW617N brass

Monobloc command stem: stainless steel





Manual handwheel: ABS

Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece	Notes
R422X132	G 3/8" M x G 3/8" F	Chrome plated brass	Micrometric handwheel	Tail piece with self-sealing	KEYMARK (EN215) certified
R422X133	G 1/2" M x G 1/2" F	Chrome plated brass	Micrometric handwheel	Tail piece with self-sealing	KEYMARK (EN215) certified
R422FX004	G 3/4" M x G 3/4" F	Chrome plated brass	Micrometric handwheel	Tail piece without self-sealing	KEYMARK (EN215) certified



Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R422X132	3/8" x 3/8"	77	54	15	22	76	42	27
R422X133	1/2" x 1/2"	79	55	17	26	82	42	30
R422FX004	3/4" x 3/4"	89	61	22	32	93	42	38

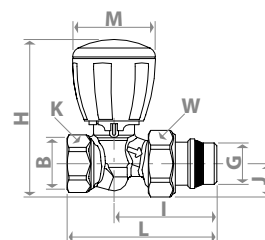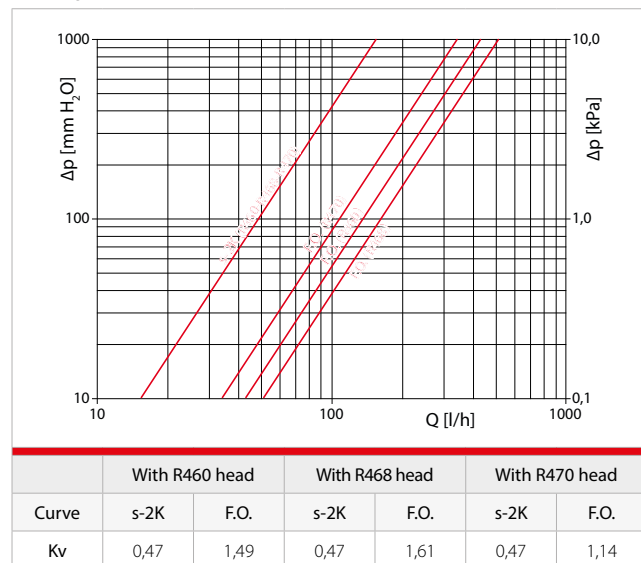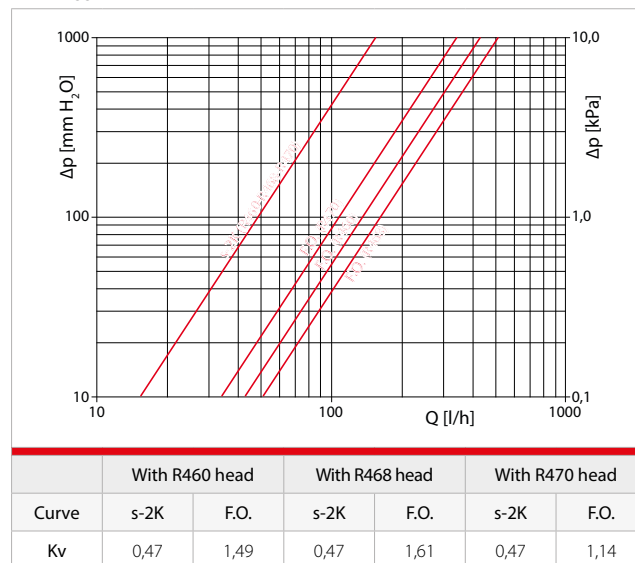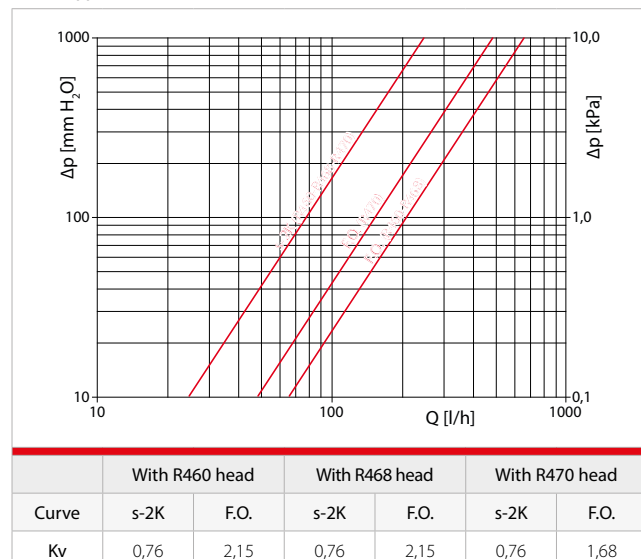**Hydraulic features****R422X132****R422X133****R422FX004**

> R435TG




Reverse angle micrometric valve with thermostatic option, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar with manual handwheel; 10 bar in combination with thermostatic heads  
Max. differential pressure with thermostatic heads: 1,4 bar (1/2")

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: stainless steel  
Manual handwheel: ABS  
Gaskets: EPDM


Product code	Connections		Finishing	Type of knob		Type of tail piece		Notes
R435X053	G 1/2"M x G 1/2"F		Chrome plated brass	Micrometric handwheel		Tail piece with self-sealing		KEYMARK (EN215) certified

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R435X053	1/2" x 1/2"	53	53	36	25	121	42	30

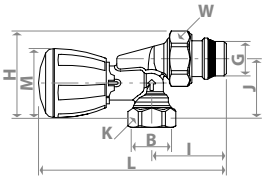


Hydraulic features

R435X053

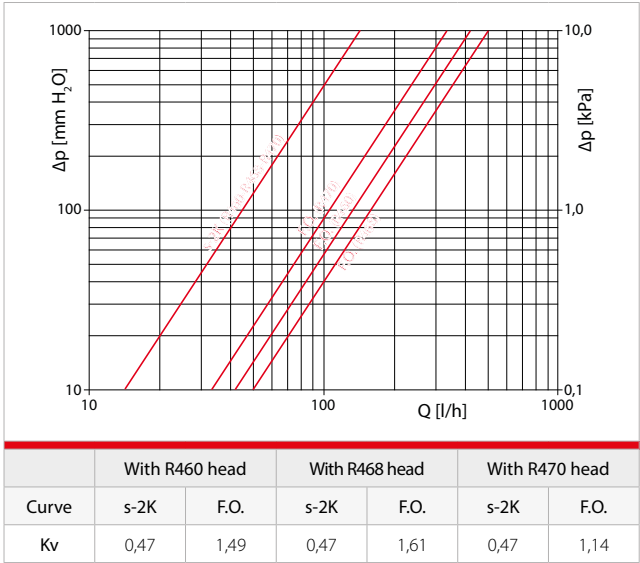


DIMENSIONS WITH THERMOSTATIC HEADS

Valves with worksite protection

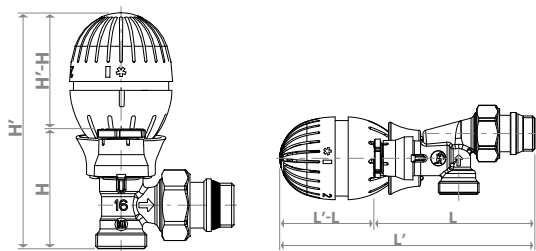	Thermostatic heads			
	Type	R460	R468	R470
	H' - H [mm]	71	71	54
	L' - L [mm] for R415TG	71	71	54

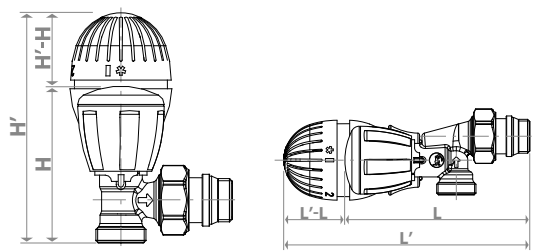


Valves with manual handwheel




	Thermostatic heads			
	Type	R460	R468	R470
	H' - H [mm]	53	52	35
	L' - L [mm] for R435TG	53	52	35



**Warning.**  
On systems equipped with thermostatic heads, the use of the R147N pressure differential valves is recommended, in order to avoid overpressure phenomena derived from the possible closure by contemporaneousness factor of the heads.


# ADDITIONAL INFORMATION FOR KEYMARK (EN215) CERTIFIED VALVES

Valve size	Thermostatic head in combination	Nominal flow rate $q_{mNH}$ in combination with thermostatic head [kg/h]	Authority "a" of the stopper
3/8" (R401X132, R402X132)	 R460	150	0,90
1/2" (R401X133, R402X133, R415X033)		150	0,90
3/4" (R401FX004, R402FX004)		240	0,88
3/8" (R401X132, R402X132)	 R468	150	0,91
1/2" (R401X133, R402X133, R415X033)		150	0,91
3/4" (R401FX004, R402FX004)		240	0,88
3/8" (R401X132, R402X132)	 R470	150	0,83
1/2" (R401X133, R402X133, R415X033)		150	0,83
3/4" (R401FX004, R402FX004)		240	0,79

Valve size	Thermostatic head in combination	Nominal flow rate $q_{mNH}$ in combination with thermostatic head [kg/h]	Authority "a" of the stopper
3/8" (R421X132, R422X132)	 R460	150	0,90
1/2" (R421X133, R422X133, R435X053)		150	0,90
3/4" (R421FX004, R422FX004)		240	0,88
3/8" (R421X132, R422X132)	 R468	150	0,91
1/2" (R421X133, R422X133, R435X053)		150	0,91
3/4" (R421FX004, R422FX004)		240	0,88
3/8" (R421X132, R422X132)	 R470	150	0,83
1/2" (R421X133, R422X133, R435X053)		150	0,83
3/4" (R421FX004, R422FX004)		240	0,79

## KEYMARK (EN215) certification

Product code	Declared hysteresis $C_H$	Influence of the declared water temperature $W_H$	Declared response time $Z_H$	Influence of the declared differential pressure $D_H$	Control accuracy $CA_H$
R460X001	0,35 K	0,9 K	26 min.	0,4 K	0,6 K
R468X001	0,23 K	0,42 K	25 min.	0,15 K	0,2 K
R470X001	0,4 K	1,2 K	26 min.	0,55 K	0,6 K

Complies with Directive RT2012 <i>Certità con variation temporelle</i>		TELL	
Factor VT	Value VT <sub>H</sub>	Energy efficiency class	Classification
0,56	0,6	0,5	



Manual handwheel

Product codes and technical features

## MANUAL HANDWHEEL

The habit, still strongly diffused, of installing manual valves has led Giacomini to include this type of valves within the "Giacotech" TG, F series.

The "Giacotech" TG, F series manual valves are characterized, as well as by simple maneuverability, by a new and more comfortable operating knob equipped with a specific worksite protection.



## PRODUCT CODES AND TECHNICAL FEATURES

### > R25TG



Angle manual valve, with connection for copper, plastic or multilayer pipe adaptor.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar

#### Materials

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: UNI EN 12164 CW617N brass

Manual handwheel: ABS

Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R25X032	G 3/8" M x Base 16	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R25X033	G 1/2" M x Base 16	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R25X034	G 1/2" M x Base 18	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R25X035	G 3/4" M x Base 18	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece without self-sealing
R25X036	G 3/4" M x Base 22	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece without self-sealing


Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R25X032	3/8" x 16	69	53	21	74	42	30
R25X033	1/2" x 16	69	53	21	74	42	30
R25X034	1/2" x 18	73	54	24	75	42	30
R25X035	3/4" x 18	79	60	24	84	49	38
R25X036	3/4" x 22	79	60	24	84	49	38

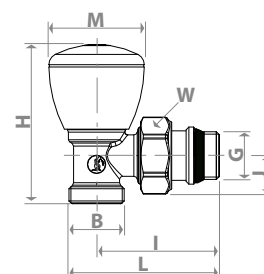

### Hydraulic features

#### R25X032, R25X033, R25X034, R25X035, R25X036

Kv obtained with Giacomini laboratory loss of pressure station

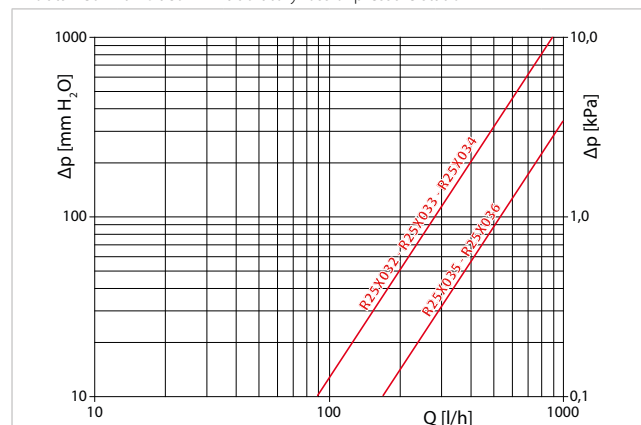

#### Handwheel position Fully Open

Code	R25X032	R25X033	R25X034	R25X035	R25X036
Kv	2,88	2,88	2,88	5,34	5,34



> R27TG




Straight manual valve, with connection for copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: UNI EN 12164 CW617N brass  
Manual handwheel: ABS  
Gaskets: EPDM


Product code	Connections	Finishing	Type of knob	Adaptors to use	Type of tail piece
R27X032	G 3/8"M x Base 16	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R27X033	G 1/2"M x Base 16	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R27X034	G 1/2"M x Base 18	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece with self-sealing
R27X035	G 3/4"M x Base 18	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece without self-sealing
R27X036	G 3/4"M x Base 22	Chrome plated brass	Manual handwheel	R178, R178C, R179, R179AM	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	M [mm]	W [mm]
R27X032	3/8"x 16	73	52	17	75	42	30
R27X033	1/2"x 16	73	52	17	76	42	30
R27X034	1/2"x 18	73	52	17	77	42	30
R27X035	3/4"x 18	87	55	21	81	49	38
R27X036	3/4"x 22	87	55	21	91	49	38

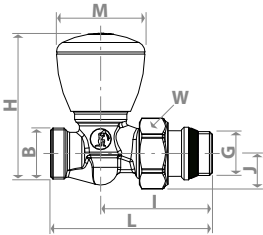

Hydraulic features

R27X032, R27X033, R27X034, R27X035, R27X036  
Kv obtained with Giacomini laboratory loss of pressure station

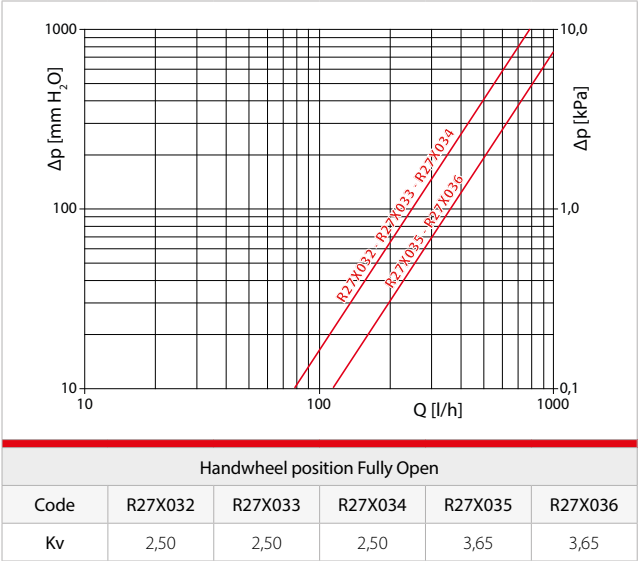

> **R5TG**


Angle manual valve, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar

**Materials**


Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: UNI EN 12164 CW617N brass  
Manual handwheel: ABS  
Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece
R5X032	G 3/8" M x G 3/8" F	Chrome plated brass	Manual handwheel	Tail piece with self-sealing
R5X033	G 1/2" M x G 1/2" F	Chrome plated brass	Manual handwheel	Tail piece with self-sealing
R5X034	G 3/4" M x G 3/4" F	Chrome plated brass	Manual handwheel	Tail piece without self-sealing
R5X035	G 1" M x G 1" F	Chrome plated brass	Manual handwheel	Tail piece without self-sealing
R5X036	G 1-1/4" M x G 1-1/4" F	Chrome plated brass	Manual handwheel	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R5X032	3/8" x 3/8"	65	50	19	22	71	42	27
R5X033	1/2" x 1/2"	70	53	21	26	74	42	30
R5X034	3/4" x 3/4"	79	60	23	32	84	49	38
R5X035	1" x 1"	87	68	30	39	92	49	46
R5X036	1-1/4" x 1-1/4"	93	81	34	49	110	59	53

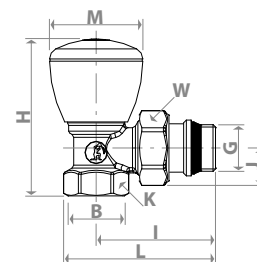**Hydraulic features****R5X032, R5X033, R5X034, R5X035, R5X036**

Kv obtained with Giacomini laboratory loss of pressure station

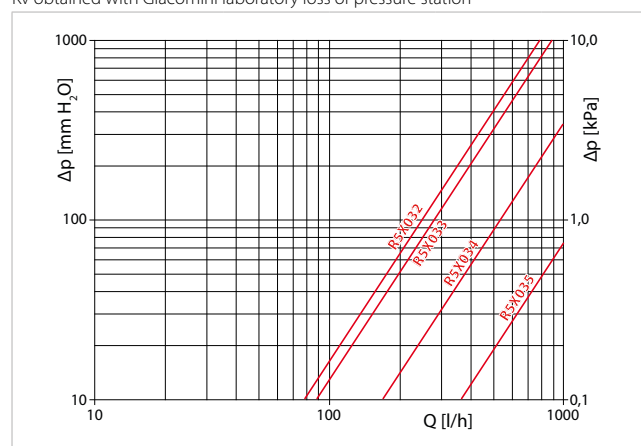

Handwheel position Fully Open

Code	R5X032	R5X033	R5X034	R5X035	R5X036
Kv	2,46	2,88	5,34	11,50	-

> R6TG




Straight manual valve, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: UNI EN 12164 CW617N brass  
Manual handwheel: ABS  
Gaskets: EPDM

Product code	Connections	Finishing	Type of knob	Type of tail piece
R6X032	G 3/8" M x G 3/8" F	Chrome plated brass	Manual handwheel	Tail piece with self-sealing
R6X033	G 1/2" M x G 1/2" F	Chrome plated brass	Manual handwheel	Tail piece with self-sealing
R6X034	G 3/4" M x G 3/4" F	Chrome plated brass	Manual handwheel	Tail piece without self-sealing
R6X035	G 1" M x G 1" F	Chrome plated brass	Manual handwheel	Tail piece without self-sealing
R6X036	G 1-1/4" M x G 1-1/4" F	Chrome plated brass	Manual handwheel	Tail piece without self-sealing


Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	M [mm]	W [mm]
R6X032	3/8" x 3/8"	69	56	15	22	77	42	27
R6X033	1/2" x 1/2"	73	60	17	26	84	42	30
R6X034	3/4" x 3/4"	86	55	21	32	81	49	38
R6X035	1" x 1"	93	69	26	39	106	49	46
R6X036	1-1/4" x 1-1/4"	97	85	30	49	135	59	53

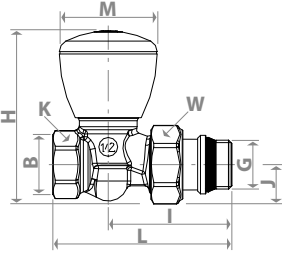


Hydraulic features

R6X032, R6X033, R6X034, R6X035, R6X036

Kv obtained with Giacomini laboratory loss of pressure station

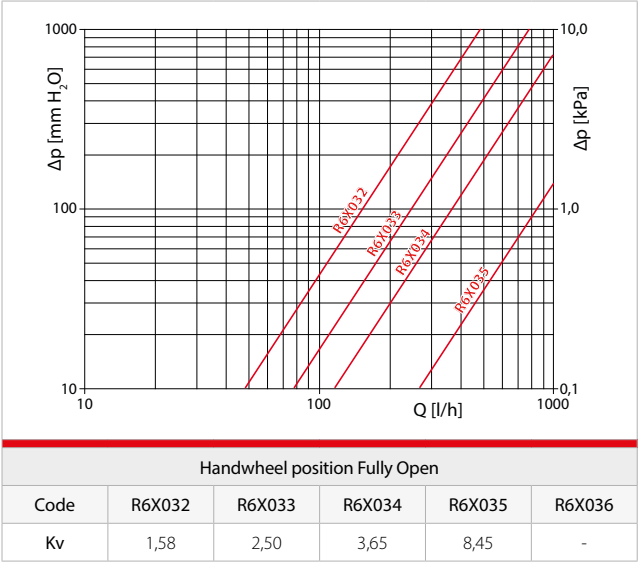

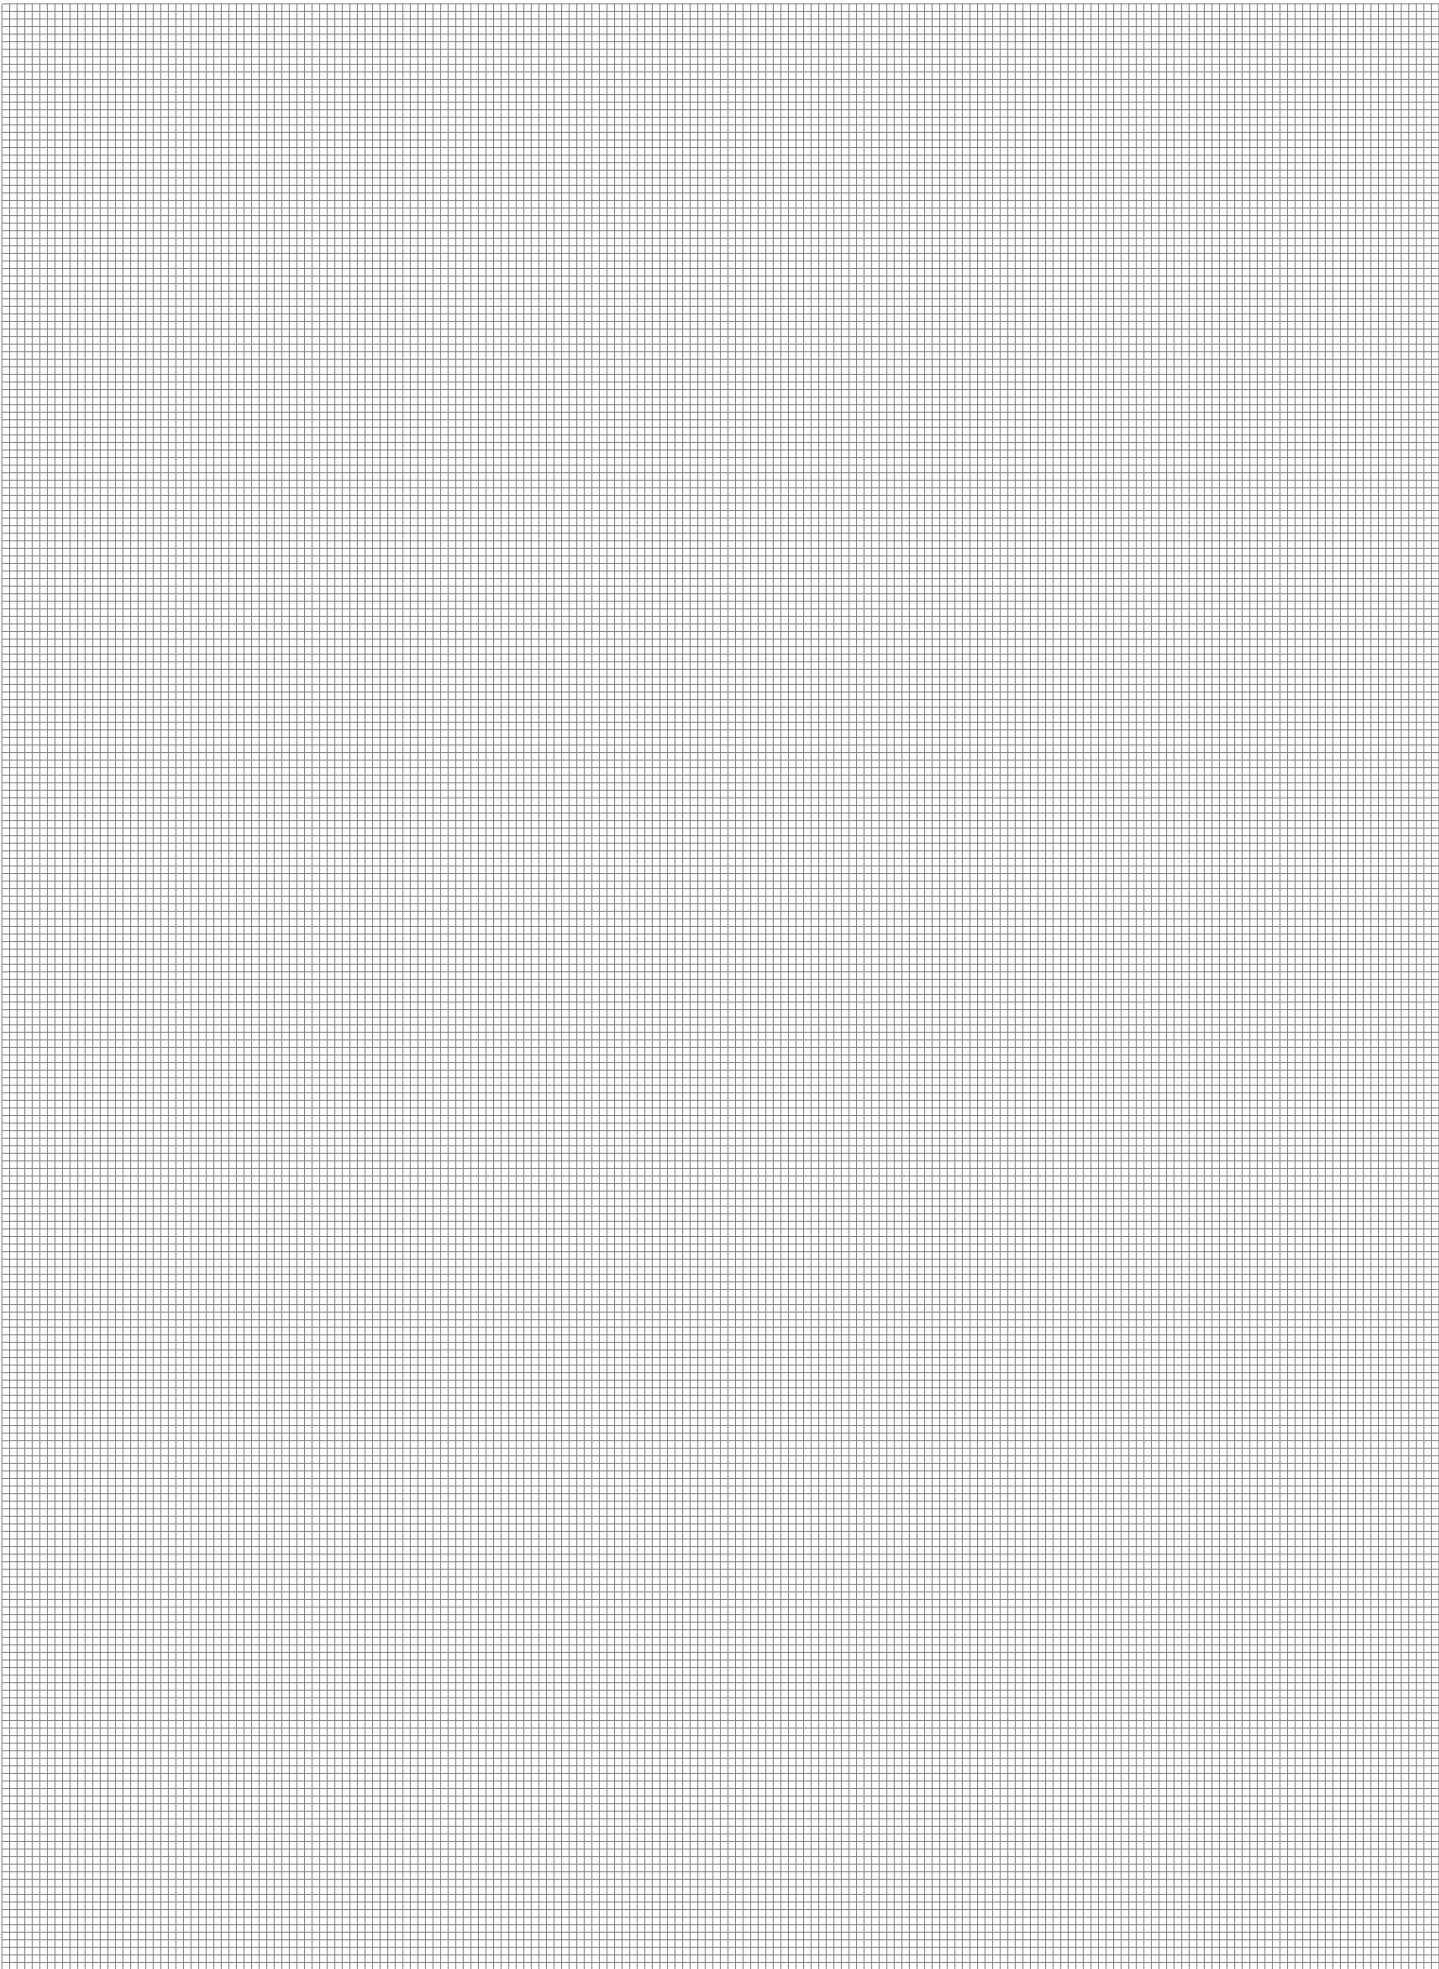



## LOCKSHIELDS

System adjustment

Product codes and technical features

## SYSTEM ADJUSTMENT

In order to allow the installer to have a complete installation system, the lockshields are also included in the "Giacotech" TG, F series, which are essential for the correct balancing of the system.

This operation is of fundamental importance to guarantee the correct installation functioning.

By removing the upper cap, you can easily access the adjustment stem that must be maneuvered with the aid of a specific Allen wrench (R73). Starting from the Fully Closed position, the stopper is opened according to the system design.



## PRODUCT CODES AND TECHNICAL FEATURES

### > R29TG



Angle lockshield, with connection for copper, plastic or multilayer pipe adaptor.

Fluid of use: water and glycol solutions (max. 30 %)

Temperature range: 5÷110 °C

Max. working pressure: 16 bar

#### Materials

Body and main components: UNI EN 12165 CW617N brass


Monobloc command stem: UNI EN 12164 CW617N brass

Protection cap: ABS or brass, depending on codes

Gaskets: EPDM

Product code	Connections	Finishing	Type of cap	Adaptors to use	Type of tail piece
R29X032	G 3/8"M x Base 16	Chrome plated brass	Plastic cap	R178, R178C, R179, R179AM	Tail piece with self-sealing
R29X033	G 1/2"M x Base 16	Chrome plated brass	Plastic cap	R178, R178C, R179, R179AM	Tail piece with self-sealing
R29X034	G 1/2"M x Base 18	Chrome plated brass	Plastic cap	R178, R178C, R179, R179AM	Tail piece with self-sealing
R29X035	G 3/4"M x Base 18	Chrome plated brass	Brass cap	R178, R178C, R179, R179AM	Tail piece without self-sealing
R29X036	G 3/4"M x Base 22	Chrome plated brass	Brass cap	R178, R178C, R179, R179AM	Tail piece without self-sealing


Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	Y [mm]	W [mm]
R29X032	3/8" x 16	47	53	21	70	-	30
R29X033	1/2" x 16	47	53	21	70	-	30
R29X034	1/2" x 18	50	54	24	71	-	30
R29X035	3/4" x 18	54	60	24	79	35	38
R29X036	3/4" x 22	61	60	31	79	35	38

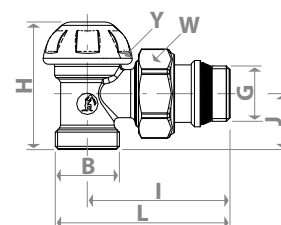

### Hydraulic features

#### R29X032, R29X033, R29X034

Kv obtained with Giacomini laboratory loss of pressure station

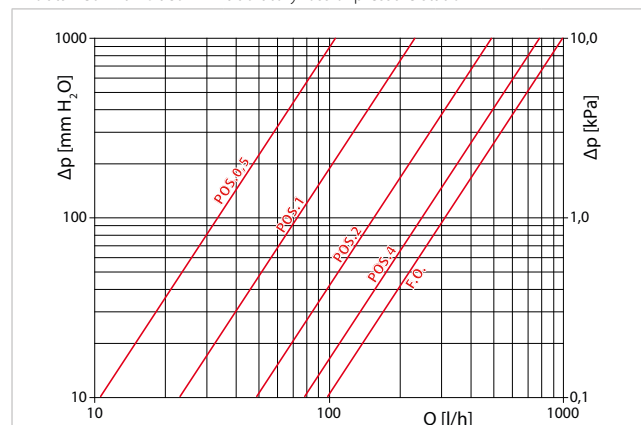


N° of opening turns of the lockshield, starting from Fully Closed position

N° of turns	0,5	1	2	4	F.O.
Kv	0,34	0,73	1,60	2,52	3,16

#### R29X035, R29X036

Kv obtained with Giacomini laboratory loss of pressure station

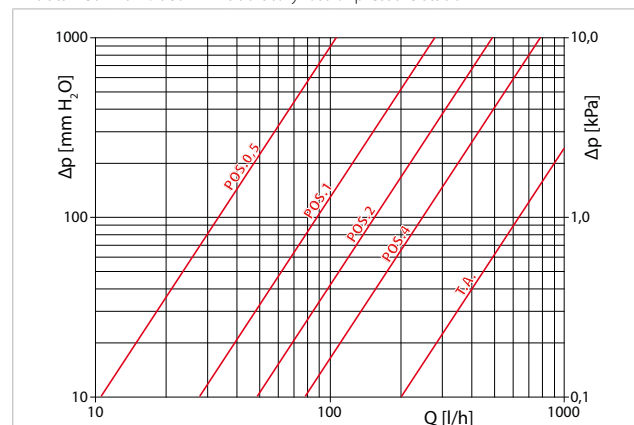

N° of opening turns of the lockshield, starting from Fully Closed position

N° of turns	0,5	1	2	4	F.O.
Kv	0,35	0,89	1,60	2,52	6,32

> R31TG




Straight lockshield, with connection for copper, plastic or multilayer pipe adaptor.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar

**Materials**  
Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: UNI EN 12164 CW617N brass  
Protection cap: ABS or brass, depending on codes  
Gaskets: EPDM

Product code	Connections	Finishing	Type of cap	Adaptors to use	Type of tail piece
R31X032	G 3/8"M x Base 16	Chrome plated brass	Plastic cap	R178, R178C, R179, R179AM	Tail piece with self-sealing
R31X033	G 1/2"M x Base 16	Chrome plated brass	Plastic cap	R178, R178C, R179, R179AM	Tail piece with self-sealing
R31X034	G 1/2"M x Base 18	Chrome plated brass	Plastic cap	R178, R178C, R179, R179AM	Tail piece with self-sealing
R31X035	G 3/4"M x Base 18	Chrome plated brass	Brass cap	R178, R178C, R179, R179AM	Tail piece without self-sealing
R31X036	G 3/4"M x Base 22	Chrome plated brass	Brass cap	R178, R178C, R179, R179AM	Tail piece without self-sealing


Product code	G x B	H [mm]	I [mm]	J [mm]	L [mm]	Y [mm]	W [mm]
R31X032	3/8"x 16	51	52	17	75	-	30
R31X033	1/2"x 16	51	52	17	76	-	30
R31X034	1/2"x 18	51	52	17	77	-	30
R31X035	3/4"x 18	62	54	21	80	35	38
R31X036	3/4"x 22	62	54	21	84	35	38

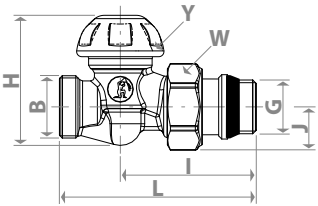

Hydraulic features


R31X032, R31X033, R31X034

Kv obtained with Giacomini laboratory loss of pressure station

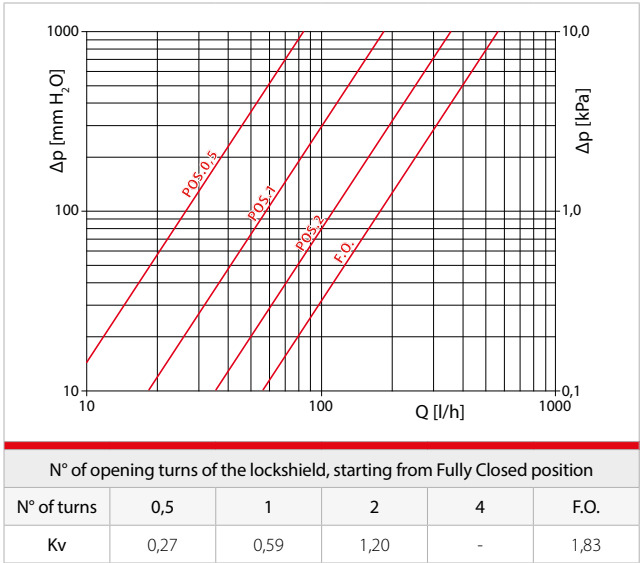


R31X035, R31X036

Kv obtained with Giacomini laboratory loss of pressure station

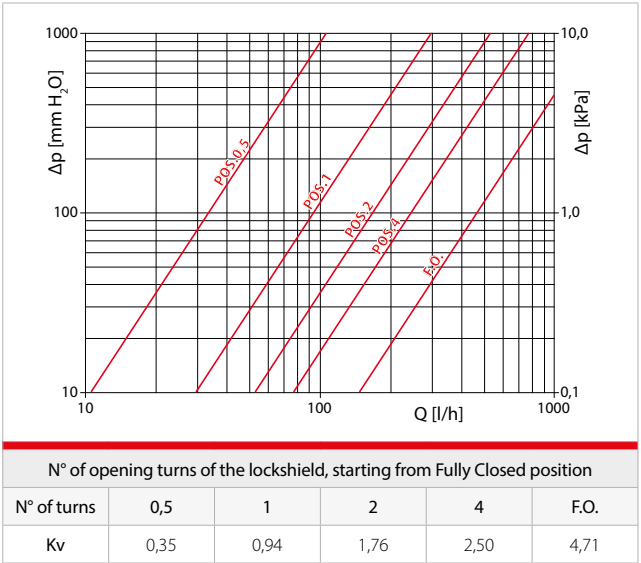

## &gt; R14TG

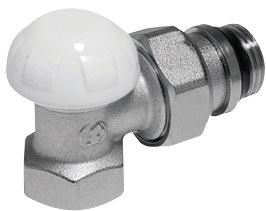


Angle lockshield, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar

**Materials**

Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: UNI EN 12164 CW617N brass  
Protection cap: ABS or brass, depending on codes  
Gaskets: EPDM

Product code	Connections	Finishing	Type of cap	Type of tail piece
R14X032	G 3/8" M x G 3/8" F	Chrome plated brass	Plastic cap	Tail piece with self-sealing
R14X033	G 1/2" M x G 1/2" F	Chrome plated brass	Plastic cap	Tail piece with self-sealing
R14X034	G 3/4" M x G 3/4" F	Chrome plated brass	Plastic cap	Tail piece without self-sealing
R14X035	G 1" M x G 1" F	Chrome plated brass	Brass cap	Tail piece without self-sealing
R14X036	G 1-1/4" M x G 1-1/4" F	Chrome plated brass	Brass cap	Tail piece without self-sealing


Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	Y [mm]	W [mm]
R14X032	3/8" x 3/8"	43	50	19	22	66	-	27
R14X033	1/2" x 1/2"	47	53	21	26	70	-	30
R14X034	3/4" x 3/4"	54	60	23	32	79	35	38
R14X035	1" x 1"	72	68	30	39	90	40	46
R14X036	1-1/4" x 1-1/4"	80	80	34	49	108	45	53

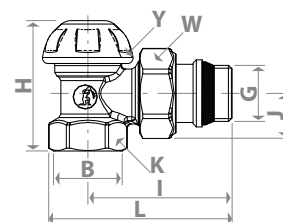

## Hydraulic features

**R14X032**

Kv obtained with Giacomini laboratory loss of pressure station

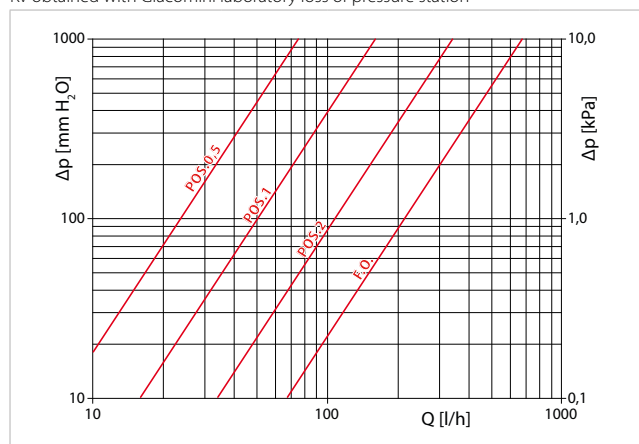


N° of opening turns of the lockshield, starting from Fully Closed position

N° of turns	0,5	1	2	4	F.O.
Kv	0,24	0,51	1,13	-	2,21

**R14X033**

Kv obtained with Giacomini laboratory loss of pressure station

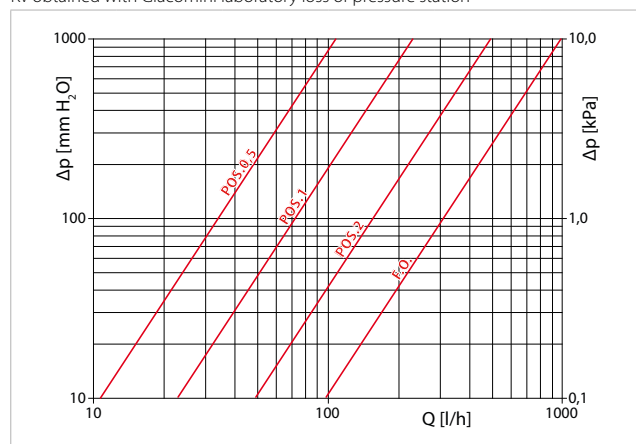


N° of opening turns of the lockshield, starting from Fully Closed position

N° of turns	0,5	1	2	4	F.O.
Kv	0,34	0,73	1,60	-	3,16



R14X034


Kv obtained with Giacomini laboratory loss of pressure station

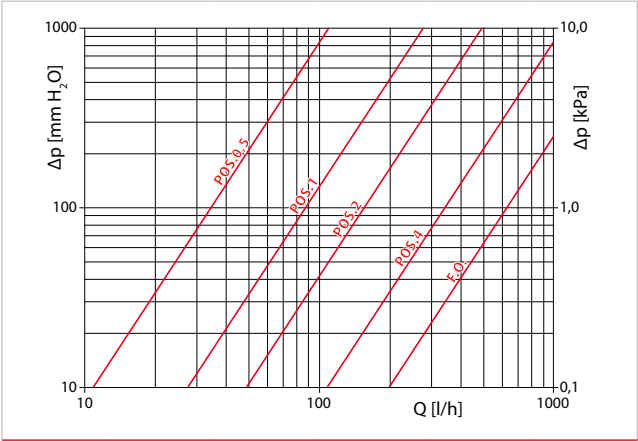

N° of opening turns of the lockshield, starting from Fully Closed position					
N° of turns	0,5	1	2	4	F.O.
Kv	0,35	0,89	1,60	3,46	6,32

R14X035


Kv obtained with Giacomini laboratory loss of pressure station

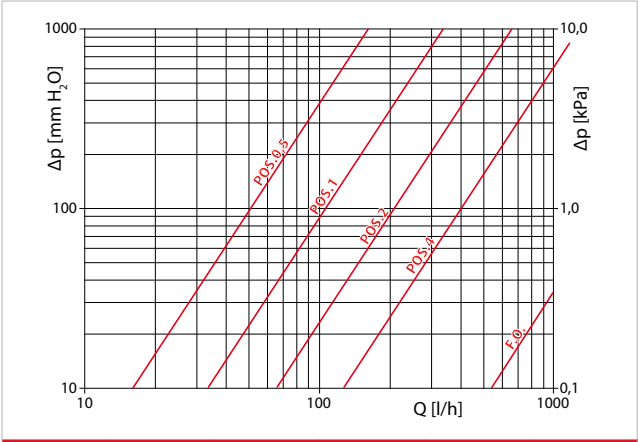

N° of opening turns of the lockshield, starting from Fully Closed position					
N° of turns	0,5	1	2	4	F.O.
Kv	0,51	1,15	2,12	4,00	11,80

R14X036

Kv obtained with Giacomini laboratory loss of pressure station

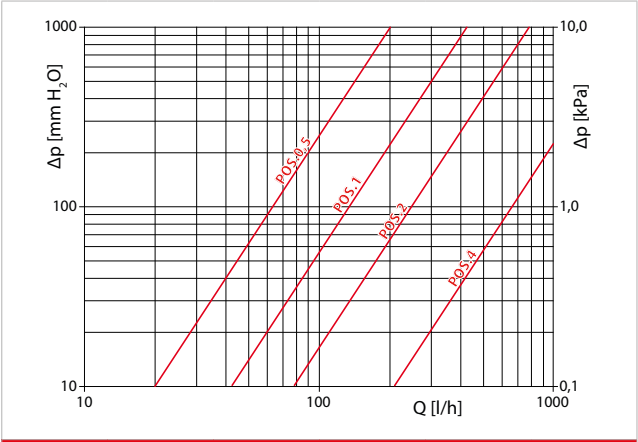

N° of opening turns of the lockshield, starting from Fully Closed position					
N° of turns	0,5	1	2	4	F.O.
Kv	0,64	1,46	2,52	6,70	14,10

> **R15TG**


Straight lockshield, with iron pipe connection.  
Fluid of use: water and glycol solutions (max. 30 %)  
Temperature range: 5÷110 °C  
Max. working pressure: 16 bar

**Materials**


Body and main components: UNI EN 12165 CW617N brass  
Monobloc command stem: UNI EN 12164 CW617N brass  
Protection cap: ABS or brass, depending on codes  
Gaskets: EPDM

Product code	Connections	Finishing	Type of cap	Type of tail piece
R15X032	G 3/8"M x G 3/8"F	Chrome plated brass	Plastic cap	Tail piece with self-sealing
R15X033	G 1/2"M x G 1/2"F	Chrome plated brass	Plastic cap	Tail piece with self-sealing
R15X034	G 3/4"M x G 3/4"F	Chrome plated brass	Plastic cap	Tail piece without self-sealing
R15X035	G 1"M x G 1"F	Chrome plated brass	Brass cap	Tail piece without self-sealing
R15X036	G 1-1/4"M x G 1-1/4"F	Chrome plated brass	Brass cap	Tail piece without self-sealing

Product code	G x B	H [mm]	I [mm]	J [mm]	K [mm]	L [mm]	Y [mm]	W [mm]
R15X032	3/8" x 3/8"	47	56	15	22	76	-	27
R15X033	1/2" x 1/2"	51	60	17	26	83	-	30
R15X034	3/4" x 3/4"	62	55	21	32	81	35	38
R15X035	1" x 1"	78	69	26	39	106	40	46
R15X036	1-1/4" x 1-1/4"	86	78	30	49	119	45	53

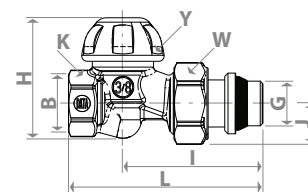**Hydraulic features****R15X032**

Kv obtained with Giacomini laboratory loss of pressure station

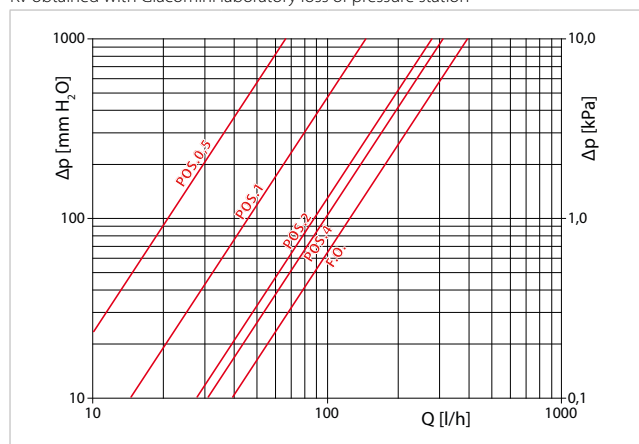


N° of opening turns of the lockshield, starting from Fully Closed position

N° of turns	0,5	1	2	4	F.O.
Kv	0,21	0,46	0,89	0,98	1,33

**R15X033**

Kv obtained with Giacomini laboratory loss of pressure station

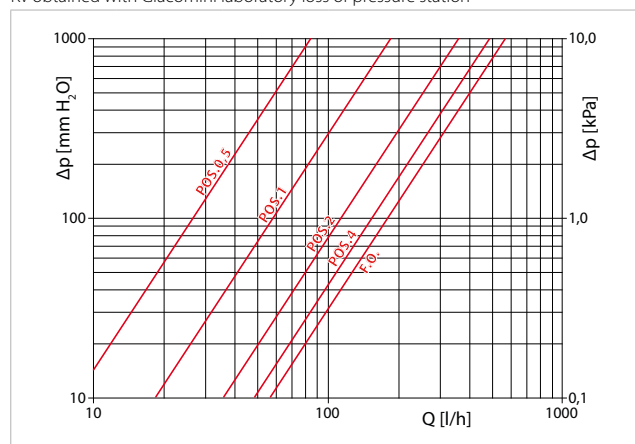


N° of opening turns of the lockshield, starting from Fully Closed position

N° of turns	0,5	1	2	4	F.O.
Kv	0,27	0,59	1,20	1,60	1,83


R15X034

Kv obtained with Giacomini laboratory loss of pressure station

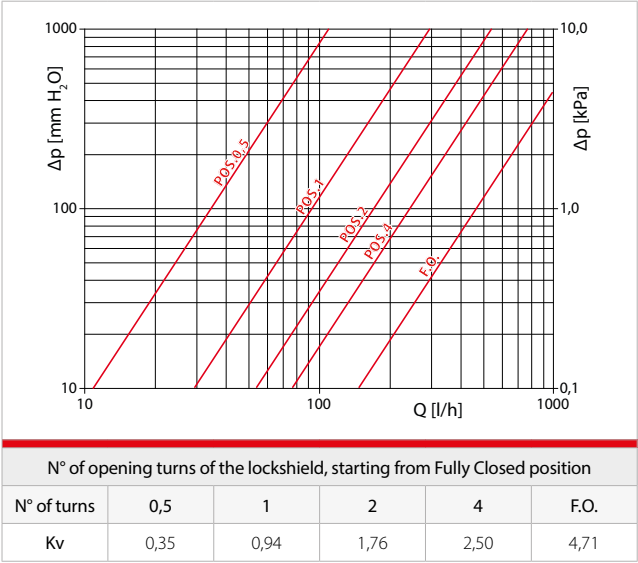


R15X035


Kv obtained with Giacomini laboratory loss of pressure station

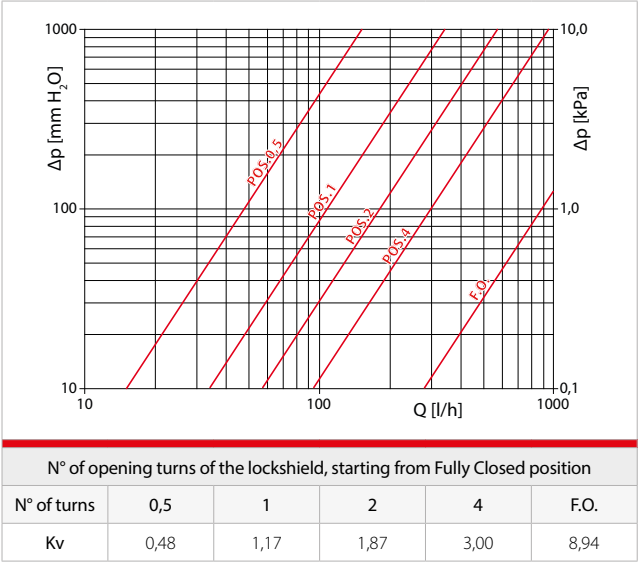

R15X036

Kv obtained with Giacomini laboratory loss of pressure station

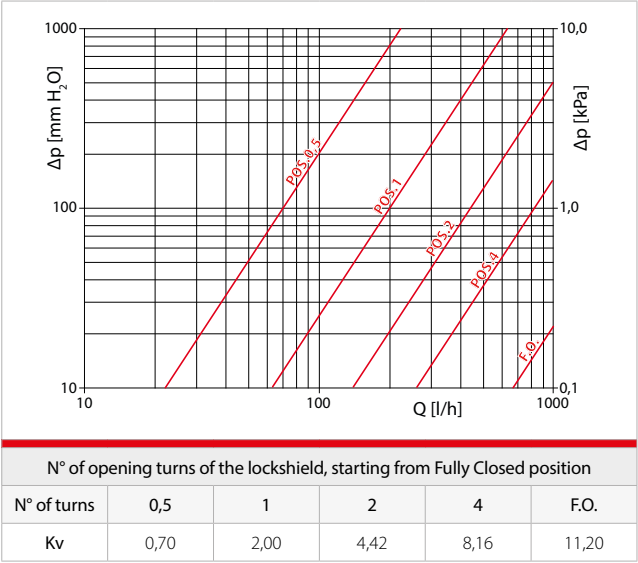

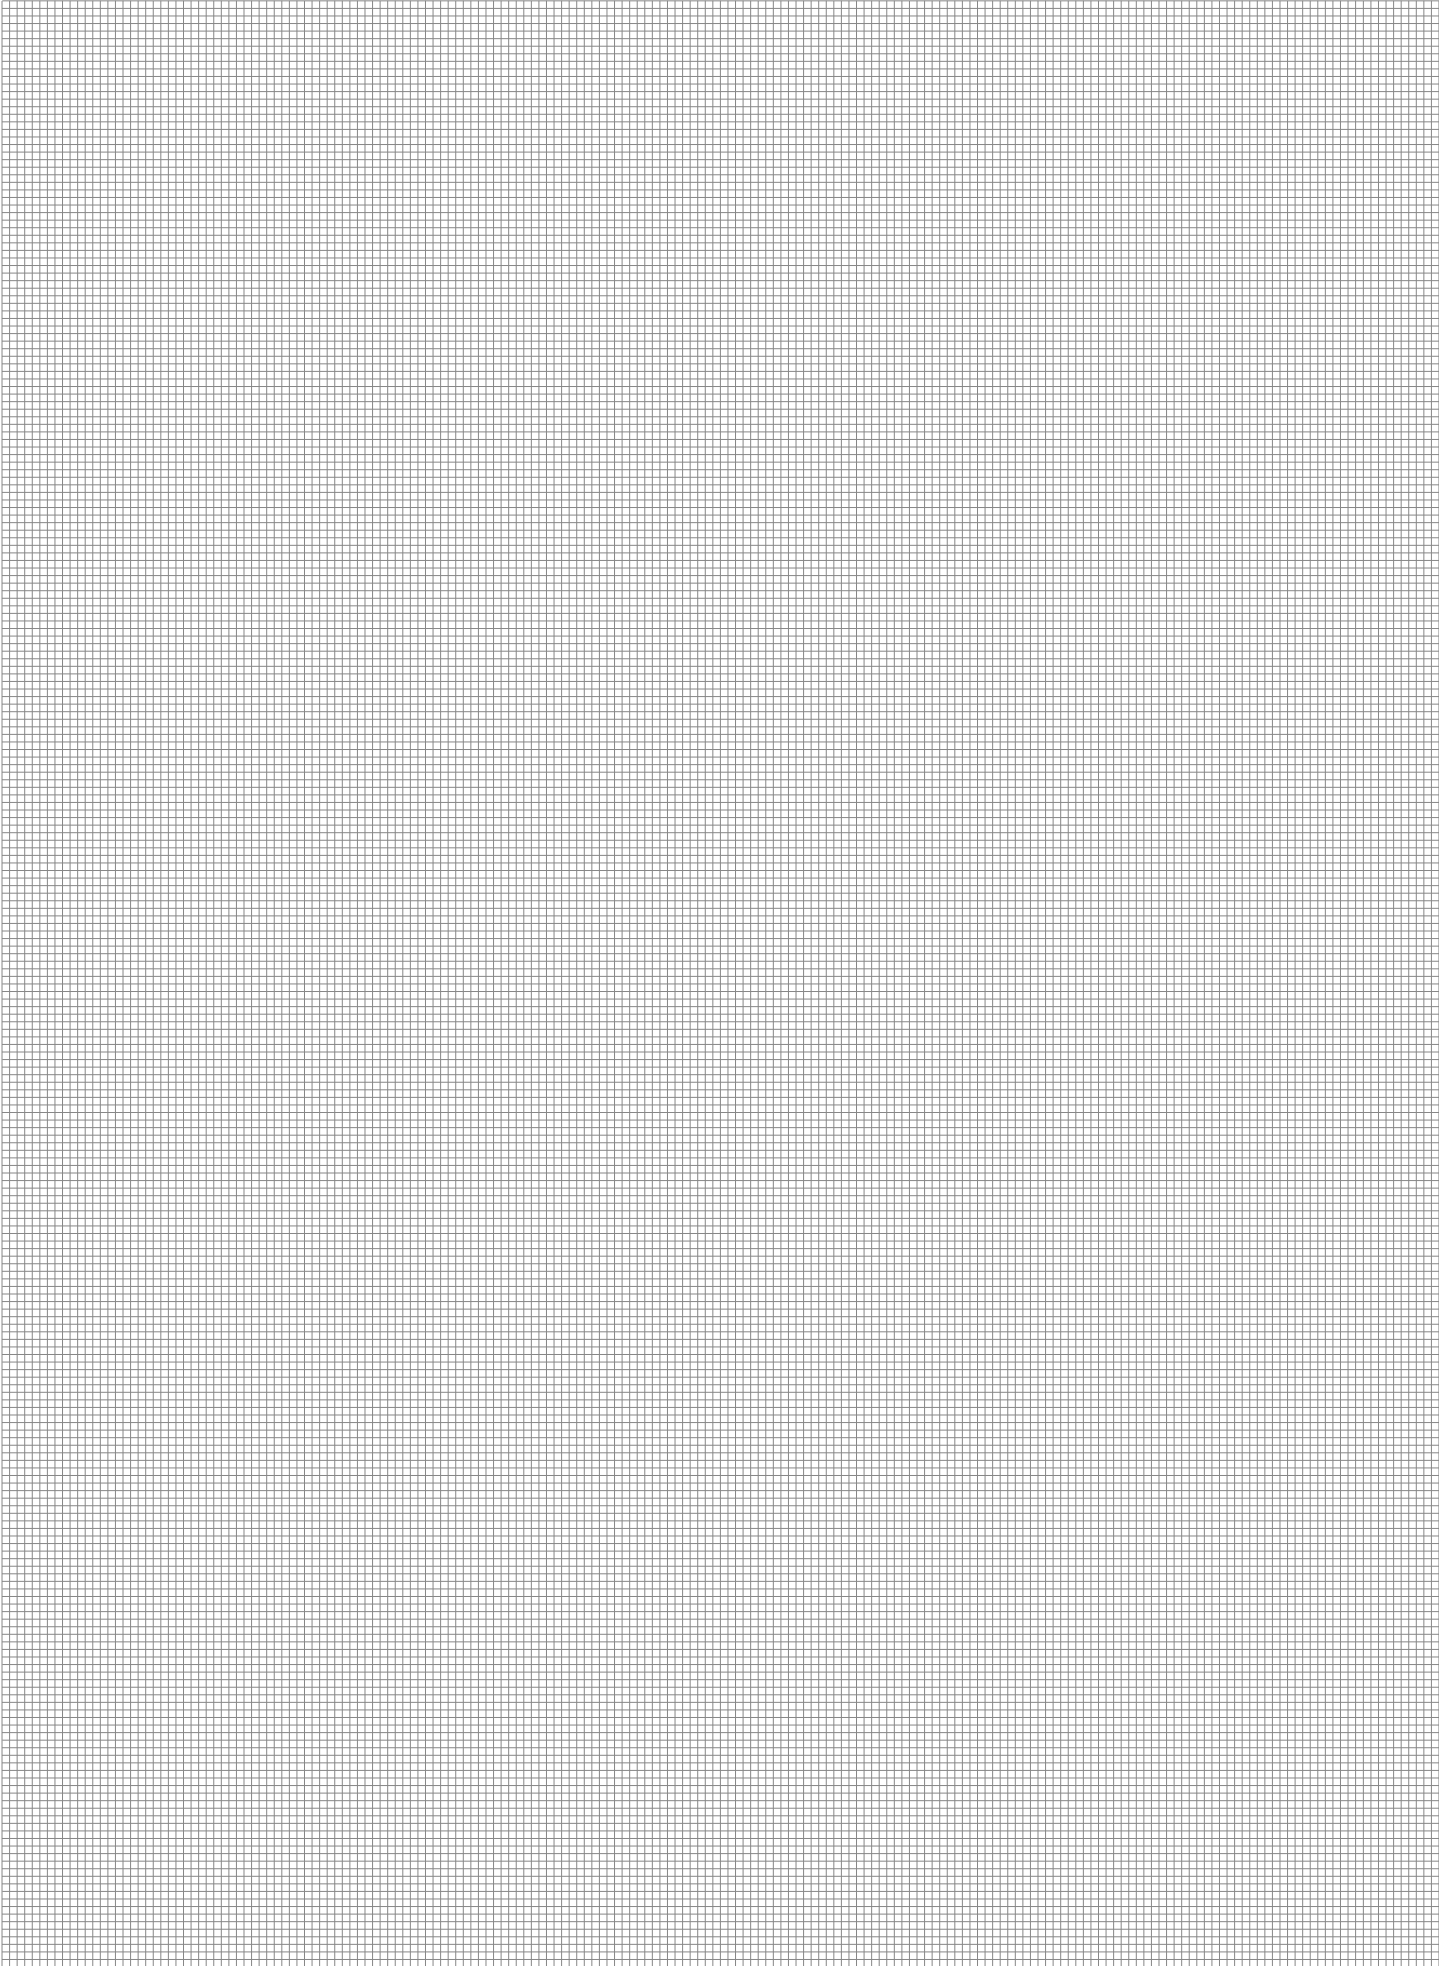



Thermostatic heads

Chronothermostat for radiators

Tail pieces and nuts

Bonnets and special wrenches

Handwheels and caps

## THERMOSTATIC HEADS

## &gt; R460



Thermostatic head with liquid sensor and Clip-Clap quick connection to the valve body. Can be installed on all valves with thermostatic option, series TG, D, F

Product code	Connection	Notes
R460X001	Clip-Clap	KEYMARK (EN215) certified



## &gt; R470



Thermostatic head with liquid sensor and Clip-Clap quick connection to the valve body. Can be installed on all valves with thermostatic option, series TG, D, F

Product code	Connection	Notes
R470X001	Clip-Clap	KEYMARK (EN215) certified



## &gt; R468



Thermostatic head with liquid sensor and Clip-Clap quick connection to the valve body. Can be installed on all valves with thermostatic option, series TG, D, F

Product code	Connection	Notes
R468X001	Clip-Clap	KEYMARK (EN215) certified



## &gt; R462



Thermostatic head with remote sensor and knob on the valve. Can be installed on all valves with thermostatic option, series TG, D, F.

Product code	Capillary pipe lenght [m]
R462X002	2
R462X005	5

## &gt; R463



Thermostatic head with remote sensor and knob, actuator to be installed on the valve. Can be installed on all valves with thermostatic option, series TG, D, F.

Product code	Capillary pipe lenght [m]
R463X002	2
R463X005	5

## TELL label

The R460 thermostatic heads obtained the TELL label (Thermostatic Efficiency Label) in the class A of energy efficiency. TELL is an European classification system, applicable to thermostatic radiator valves, and it has been thought to inform and guide the consumers towards conscious purchase decisions and a responsible use of the energy. TELL classification criteria for thermostatic heads include the following merit factors:

- influence of water temperature;
- hysteresis;
- response time;
- influence of differential pressure

TELL R460	
Thermostatic Efficiency Label	
Manufacturer	Giacomini S.p.A.
Product	R460
Reg.-No.	10676-20190830
Energy	
I	■
II	■
III	■
IV	■
V	■
VI	■
www.tell-online.eu	

CHRONOTHERMOSTAT FOR RADIATORS

> K470H



Chronothermostat for radiators.  
Equipped with M30 x 1,5 mm ring nut connection and adaptor for use with a wide range of valves with thermostatic option.  
4 programmable daily time bands.  
Serial port to K471 programming key.  
Power supply: 2 AA batteries 1,5 V.  
Protection degree IP30.  
Working temperature range: 0÷50 °C.  
Compliance with Directive 2004/108/EC.

Product code	Connection	Power supply
K470HX001	M30 x 1,5 mm with adaptor	2 batteries 1,5 V

> K470W



Wireless head for radiator.  
The head includes a ring nut with M30 x 1,5 mm connection and an adaptor for use with a wide range of valves with thermostatic option.  
Protection degree: IP20.  
Temperature control range: 8÷28 °C.  
Working temperature range: 0÷50 °C.  
Complies with the EMC Directive 2014/53/EU.  
Can be installed on all TG, F series thermostatic valves.

Product code	Connection	Power supply
K470WX021	M30 x 1,5 mm with adaptor	2 batteries 1,5 V

## TAIL PIECES AND NUTS

> **P15TG**

Chrome plated brass tail piece, with self-sealing.

Product code	Connection
P15TGX002	tail piece 3/8"x3/8", for 3/8" iron pipe connection versions
P15TGX003	reduced tail piece 1/2"x3/8", for 3/8"x16, 1/2"x16, 1/2"x18 adaptor connection versions and 1/2" iron pipe connection versions
P15TGX004	tail piece 1/2"x1/2", for 1/2"x16, 1/2"x18 adaptor connection versions and 1/2" iron pipe connection versions

> **P15-2**

Chrome plated brass tail piece, without self-sealing and nut.

Product code	Connection
P15X002	3/8"
P15X003	1/2"
P15X004	3/4"
P15X005	1"
P15X006	1-1/4"

> **R173**

Chrome plated brass adjustable tail piece, without self-sealing and nut.

Product code	Connection
R173X002	3/8"
R173X003	1/2"
R173X004	3/4"
R173X005	1"
R173X006	1-1/4"
R173X007	1/2" reduced 3/8"

> **R173TG**

Chrome plated brass adjustable tail piece, with self-sealing and nut.

Product code	Connection
R173X032	3/8"
R173X033	1/2"
R173X037	1/2" reduced 3/8"

> **P18L**

Chrome plated brass nut for tail pieces.

Product code	Connection
P18LX002	5/8" x 3/8"
P18LX003	3/4" x 1/2"
P18LX004	1" x 3/4"
P18LX005	1-1/4" x 1"
P18LX006	1 1/2" x 1-1/4"



## BONNETS AND SPECIAL WRENCHES

### P12A



Bonnet for valves with thermostatic option.

Product code	Connection
P12AX011	for 3/8" - 1/2" - 3/4" valves
P12AX012	for 3/4" series F valves
P12AX003	for 1" valves

### R79B



Special key for tail pieces

Product code	Connection
R79BY001	from 3/8" to 1-1/4"

### R400



Special key for valves with thermostatic option bonnet replacement, without emptying the system.

Product code	Connection
R400Y001	for P12AX011 bonnet

## HANDWHEELS AND CAPS

### > R450TG



Micrometric handwheel for valves with thermostatic option.

Product code	Connection
R450X012	-

### > P22B-1



Handwheel for manual valves.

Product code	Connection
P22BY007	3/8" - 1/2"
P22BY008	3/4" - 1"
P22BY009	1-1/4"

### > P26PD



Plastic cap for lockshields.

Product code	Connection
P26PY012	for 3/8" iron pipe connection
P26PY013	for 1/2" iron pipe connection and 3/8"x16, 1/2"x16 e 1/2"x18 adaptor connections

### > P26A



Chrome plated brass cap for lockshields.

Product code	Connection
P26AX004	3/4"
P26AX005	1"
P26AX006	1-1/4"

---

**⚠ Safety Warning.** Installation, commissioning and periodical maintenance of the product must be carried out by qualified operators in compliance with national regulations and/or local standards. A qualified installer must take all required measures, including use of Individual Protection Devices, for his and others' safety. An improper installation may damage people, animals or objects towards which Giacomini S.p.A. may not be held liable.

**♻ Package Disposal.** Carton boxes: paper recycling. Plastic bags and bubble wrap: plastic recycling.

**ℹ Additional information.** For more information, go to [giacomini.com](http://giacomini.com) or contact our technical assistance service. This document provides only general indications. Giacomini S.p.A. may change at any time, without notice and for technical or commercial reasons, the items included herewith. The information included in this technical sheet do not exempt the user from strictly complying with the rules and good practice standards in force.

**♻ Product Disposal.** Do not dispose of product as municipal waste at the end of its life cycle. Dispose of product at a special recycling platform managed by local authorities or at retailers providing this type of service.

---



**GIACOMINI**  
WATER E-MOTION



Giacomini S.p.A.  
Via per Alzo 39, 28017 San Maurizio d'Opaglio (NO) Italia  
[consulenza.prodotti@giacomini.com](mailto:consulenza.prodotti@giacomini.com)  
☎ +39 0322 923372 - [giacomini.com](http://giacomini.com)